

Component Procedures: Coolant Level Sensor

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Coolant Level Sensor

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Coolant Level Sensor	B	0.3	0.2