

Component Procedures: Transmission Speed Sensor

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Transmission Speed Sensor

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Input Sensor	B	0.4	0.0
Replace	Output Sensor	B	0.4	0.0