

Component Procedures: Oil Level Sensor

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Oil Level Sensor

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Oil Level Sensor	B	0.6	0.0