



Component Procedures: Fuel Pump Control Unit

Table of Contents


1. Components (itype_392)
2. Components (itype_32)
3. Procedures (itype_376)
4. Technician Safety Information (itype_15)
5. Mechanical (including Torque) (itype_28)

Component Procedures: Fuel Pump Control Unit


Components (itype_392)

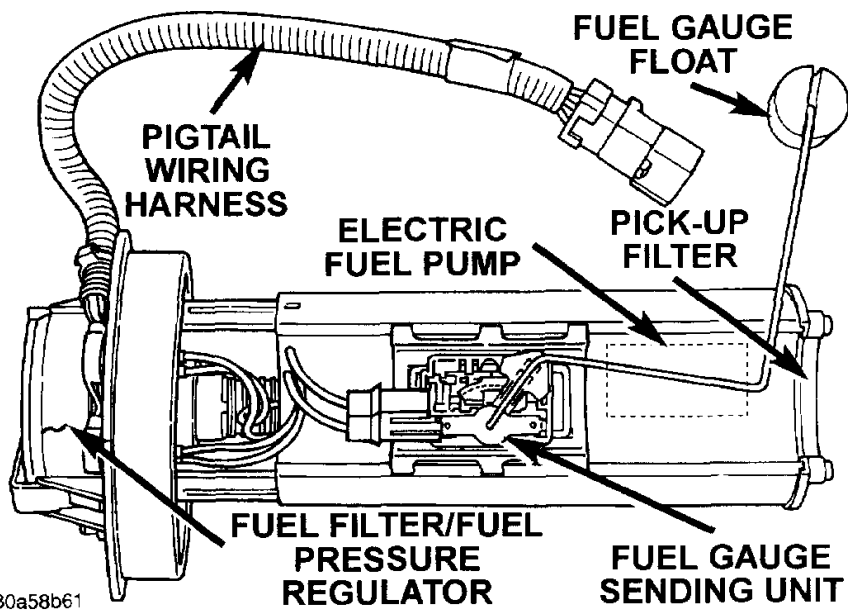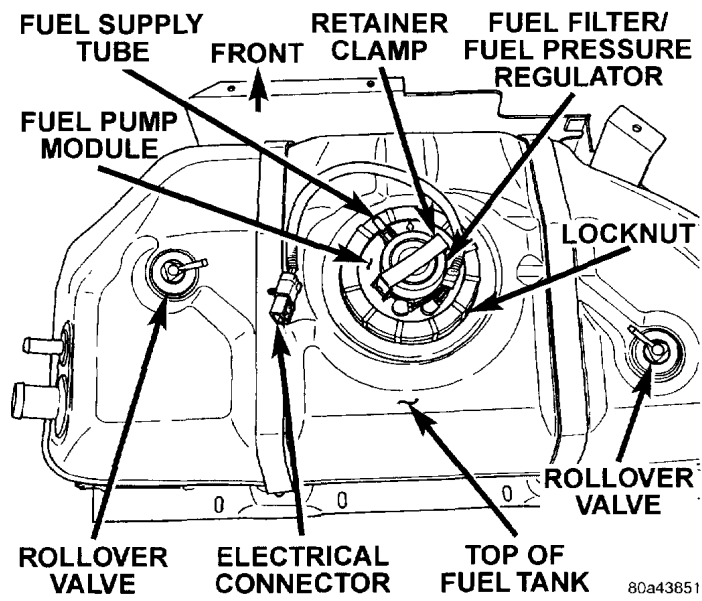


Components (itype_32)

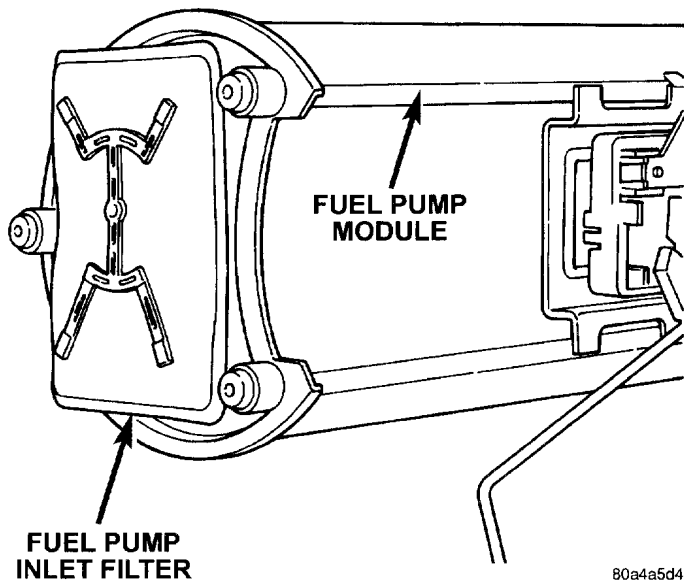


Procedures (itype_376)

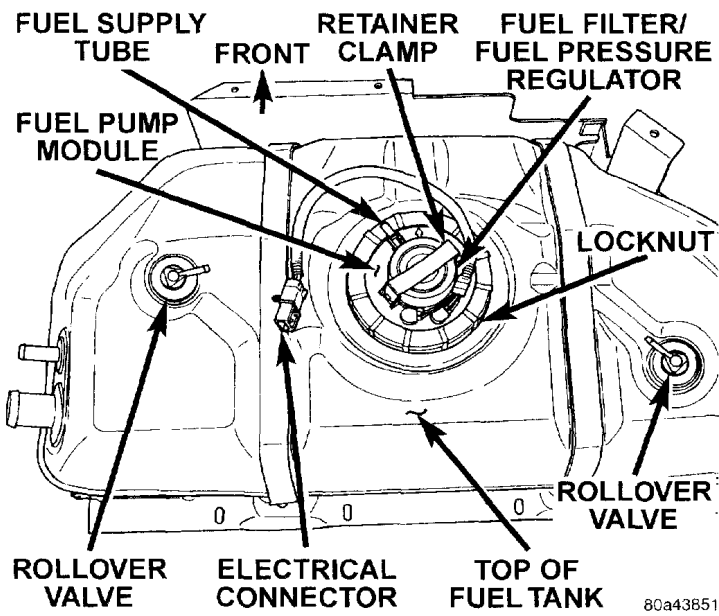

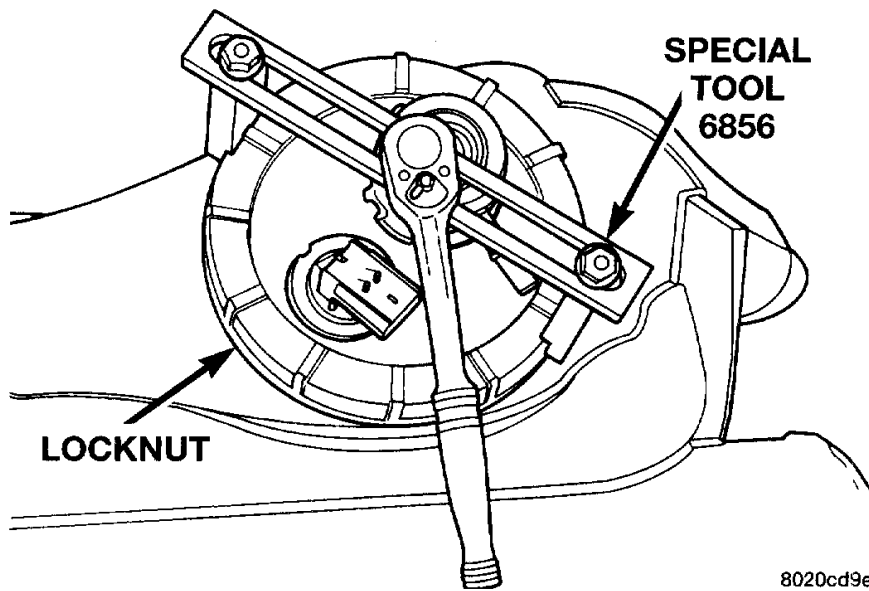

8020cd9e

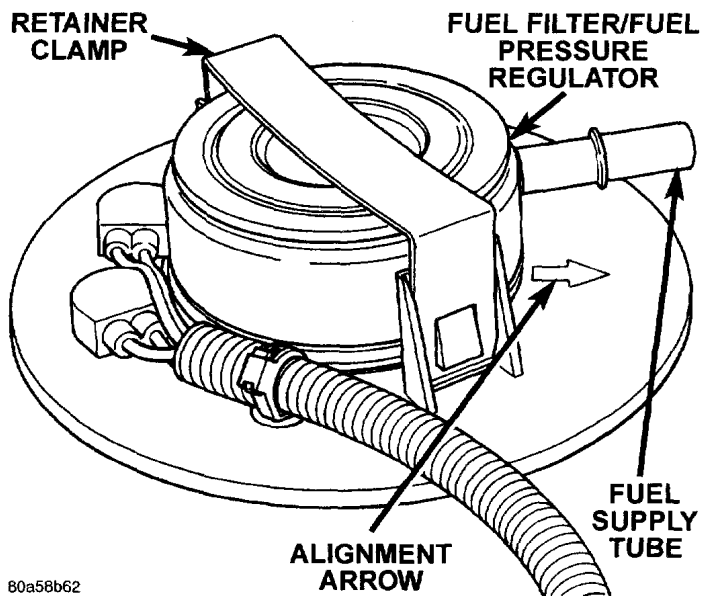

80a58b62

Technician Safety Information (itype_15)

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING THE FUEL PUMP MODULE, THE FUEL SYSTEM PRESSURE MUST BE RELEASED.

CAUTION

: Whenever the fuel pump module is serviced, the module gasket must be replaced.

Mechanical (including Torque) (itype_28)

Fuel Pump Module Locknut 62 Nm