

# **Component Procedures: Spare Tire**

## **Table of Contents**

1. Components (itype\_392)

## **Component Procedures: Spare Tire**

### **Components (itype\_392)**

The temporary

spare tire

is designed for emergency use only. The original

tire

should be repaired or replaced at the first opportunity and reinstall. Do not exceed speeds of 50 MPH. Refer to Owner's Manual for complete details.