

Component Procedures: Torque Converter Clutch Solenoid

Table of Contents

1. Parts and Labor (itype_189)
2. Connector Views (itype_47)
3. Components (itype_32)

Component Procedures: Torque Converter Clutch Solenoid

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
30RH/31RH/32RH > Lock-Up Sol?	52118595	8 - T/converter Unlock?	38.95	
30RH/31RH/32RH > Connector >?	56038235	9 - T/converter Soleno?	0.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	30RH/31RH/32RH > Lock-Up Solenoid	B	1.7	1.2

Connector Views (itype_47)

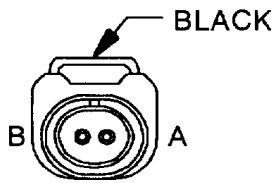


TORQUE CONVERTOR
CLUTCH SOLENOID

TORQUE CONVERTER CLUTCH SOLENOID - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
A	F12 20RD/LG	FUSED IGNITION SWITCH OUTPUT (ST-RUN)
B	T23 180R/LG	TRANSMISSION LOW/OVERDRIVE SOLENOID

Components (itype_32)

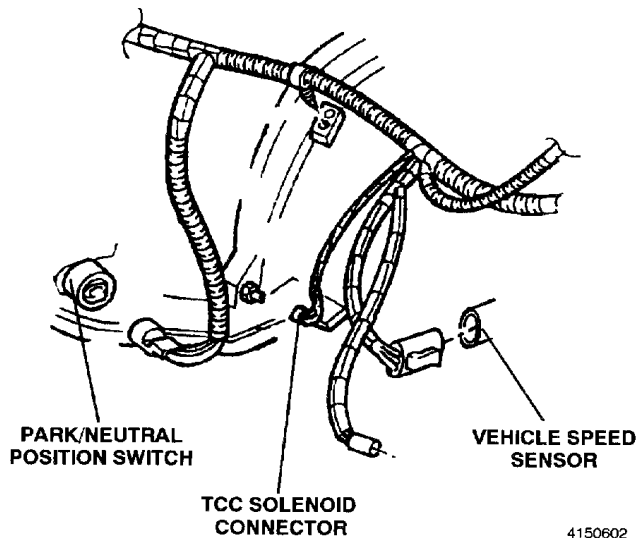

4150602