

Component Procedures: Band Apply Servo

Table of Contents

1. Parts and Labor (itype_189)
2. Cleaning and Inspection (Article 2080617)
3. Disassembly and Assembly (Article 2080618)

Component Procedures: Band Apply Servo

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	30RH/31RH/32RH > Kickdown Servo	B	1.3	0.9
Overhaul/Rebuild	30RH/31RH/32RH > Reverse Servo, Overhaul	B	2.8	2.0

Cleaning and Inspection (Article 2080617)

Non Standards

- Front Servo (2080620)
- Rear Servo (2080621)

Disassembly and Assembly (Article 2080618)

For information regarding the Service and Repair of this component and the system that it is a part of, please refer to

Automatic Transmission
/Transaxle; Service and Repair.