

Component Procedures: Steering Column Cover

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_32)
3. Procedures (itype_376)
4. Technician Safety Information (itype_15)
5. Mechanical (including Torque) (itype_28)

Component Procedures: Steering Column Cover

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
With SRS > Shroud > Manual T?	5EX01TAZ	2 - Shroud	0.00	
With SRS > Shroud > Manual T?	5EW99TAZ	2 - Shroud	0.00	
With SRS > Shroud > Auto Tra?	5EX10TAZ	2 - Shroud	0.00	
With SRS > Shroud > Auto Tra?	5EX08TAZ	2 - Shroud	0.00	


Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Lock Housing > Upper/Lower	B	0.3	0.2

Components (itype_32)

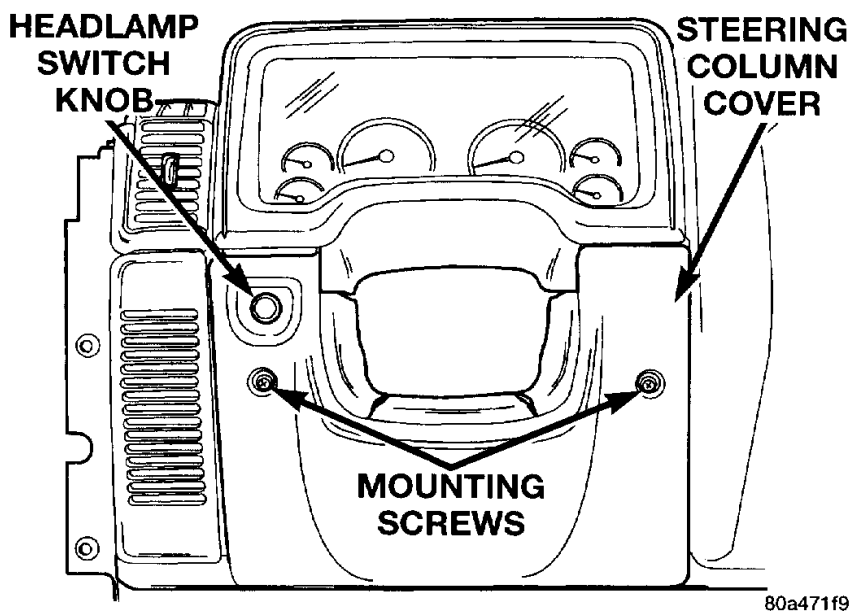

Procedures (itype_376)

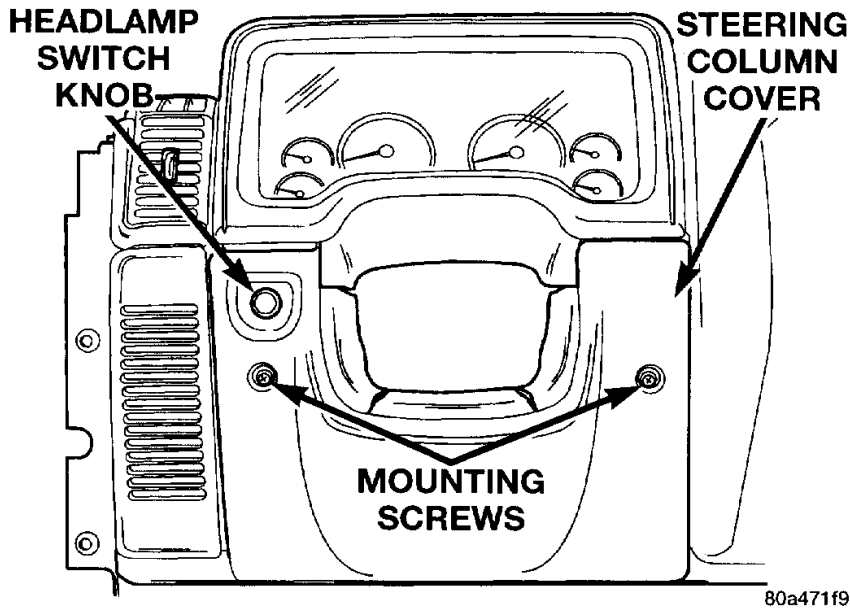

Technician Safety Information (itype_15)

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO AIRBAG AND SEAT BELTS/AIR BAGS BEFORE ATTEMPTING ANY STEERING WHEEL

STEERING COLUMN

, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIR-BAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY

Mechanical (including Torque) (itype_28)

Tighten the two screws that secure the steering column opening cover to the instrument panel screws to 2.2 N.m (20 in. lbs.)