


Component Procedures: Air Duct

Table of Contents


1. Components (itype_32)
2. Duct and Outlet Replacement (Article 2038834)
3. Technician Safety Information (itype_15)
4. Mechanical (including Torque) (itype_28)


Component Procedures: Air Duct

Components (itype_32)

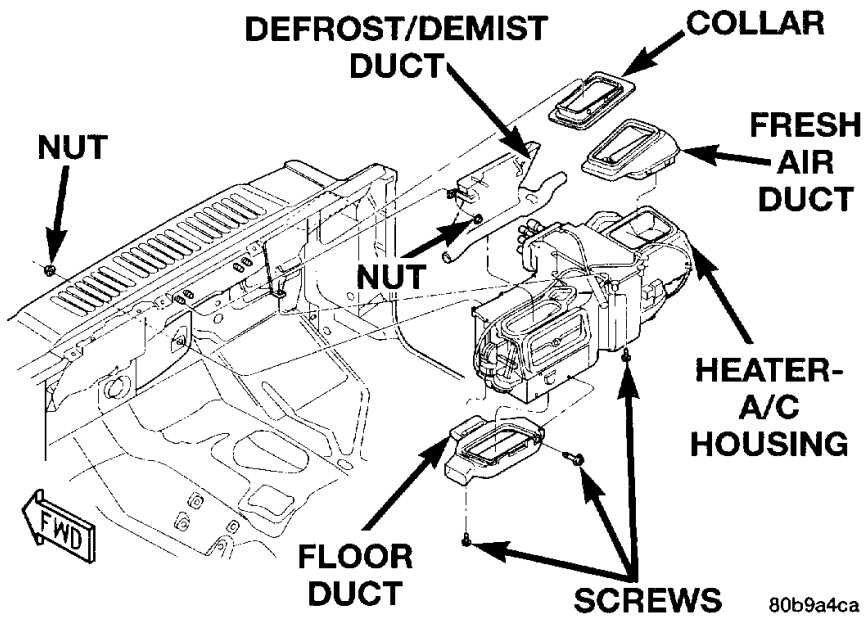

Duct and Outlet Replacement (Article 2038834)

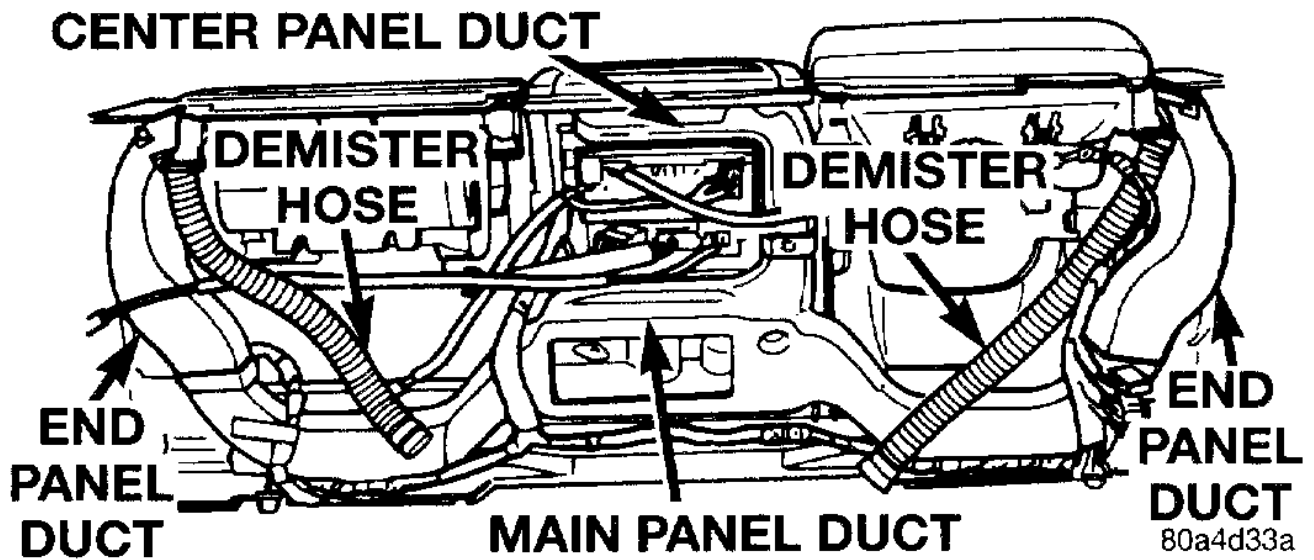

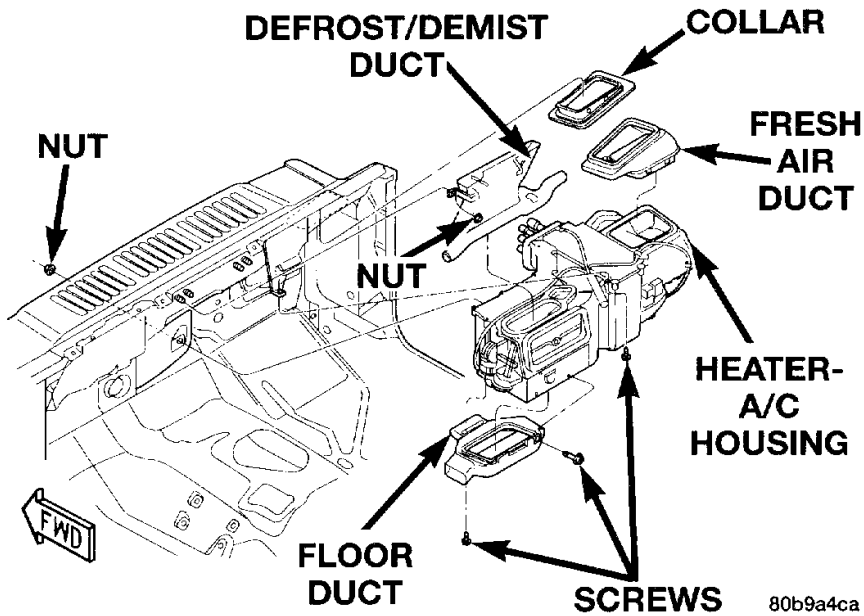

Technician Safety Information (itype_15)

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO RESTRAINT SYSTEMS / AIR BAG SYSTEMS BEFORE ATTEMPTING A STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY

Mechanical (including Torque) (itype_28)

Tighten
 floor duct
 screws to
 2.2 Nm (20 in. lbs.)

Tighten the plenum bracket screw to
 3.4 Nm (30 in. lbs.)
 Tighten the dash panel mounting nuts to
 6.2 Nm (55 in. lbs.)
 panel duct