

Component Procedures: Compressor Clutch

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_392)
3. Compressor Clutch / Coil Assembly Replacement (Article 2044032)
4. Electrical (itype_27)
5. Mechanical (including Torque) (itype_28)

Component Procedures: Compressor Clutch

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
Clutch	4882005	Clutch	0.00	Order By Description.

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Clutch, R&R	B	1.1	0.8

Components (itype_392)


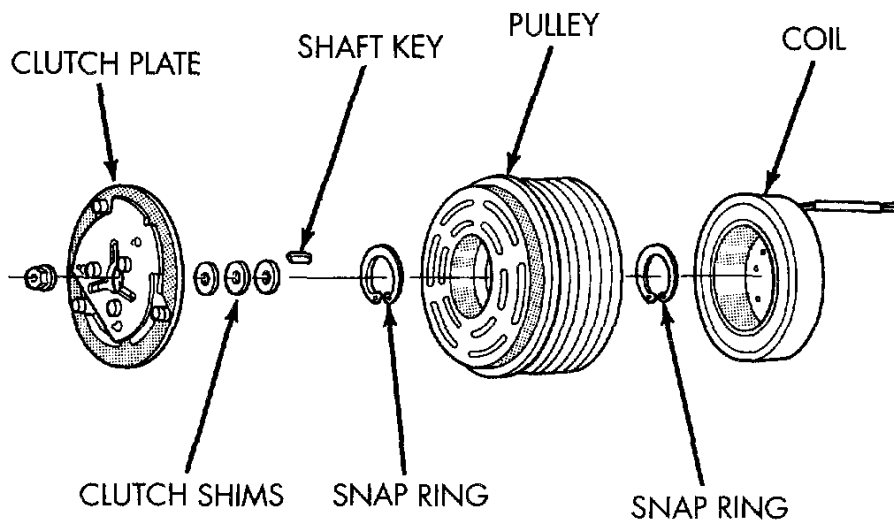




J9524-33


Compressor Clutch / Coil Assembly Replacement (Article 2044032)

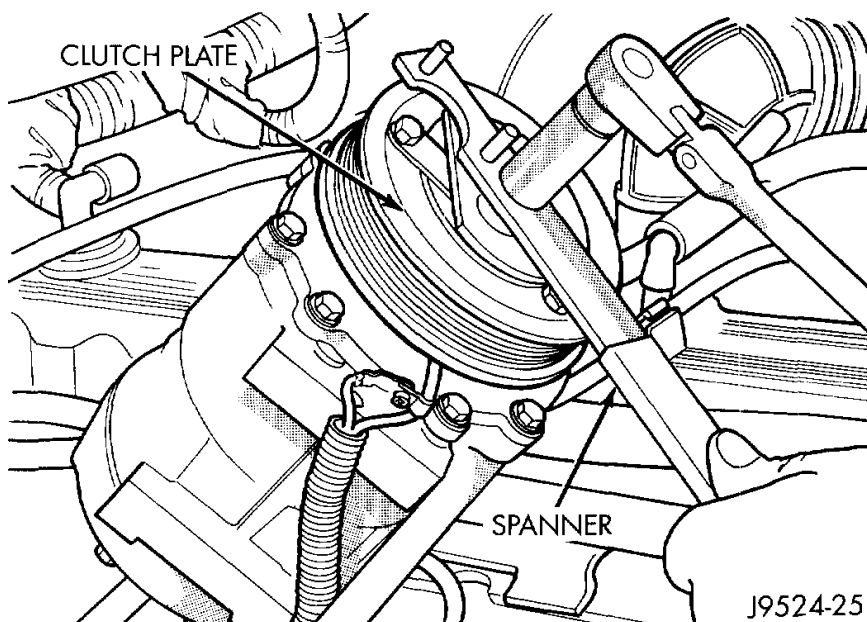


J9524-25

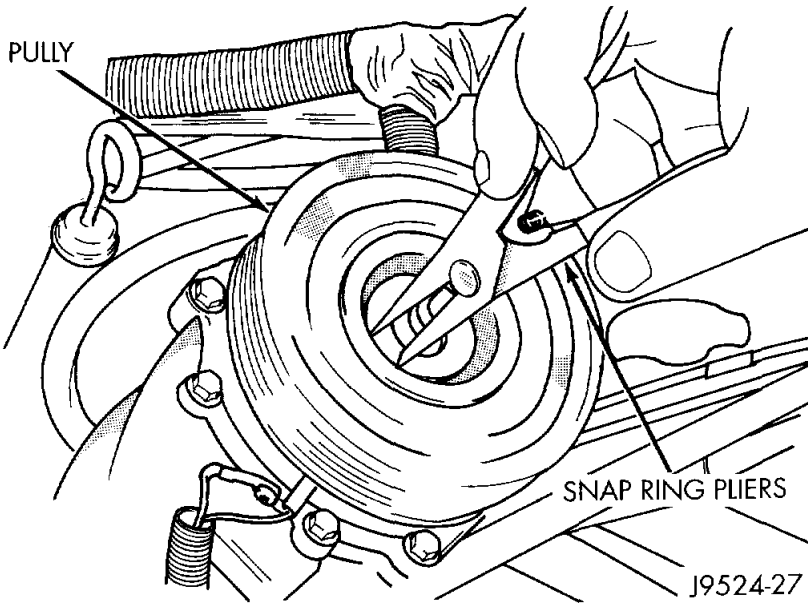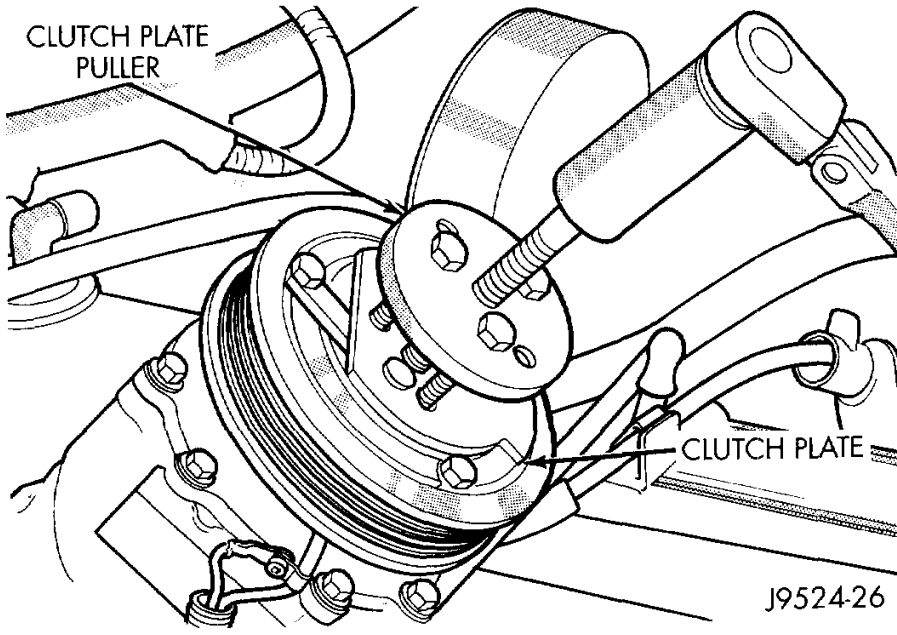

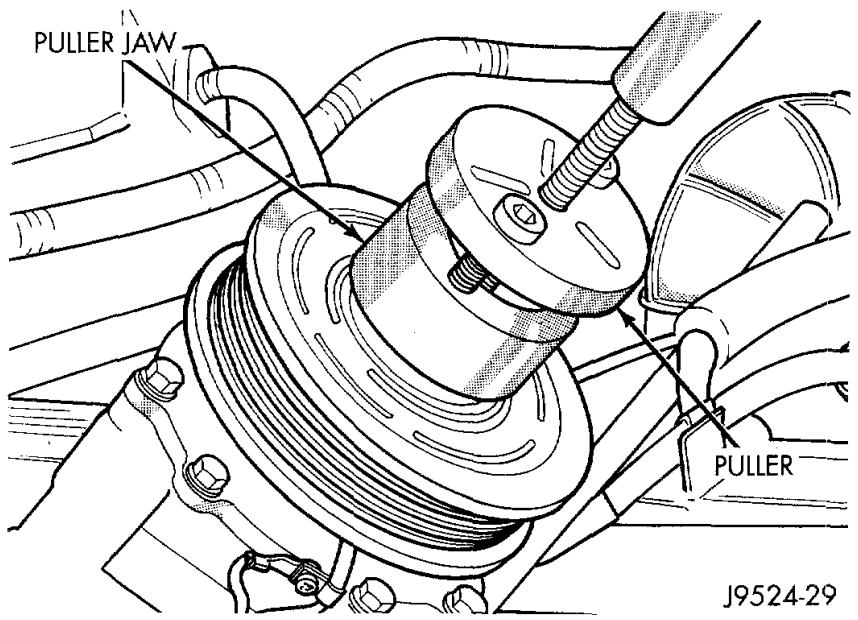
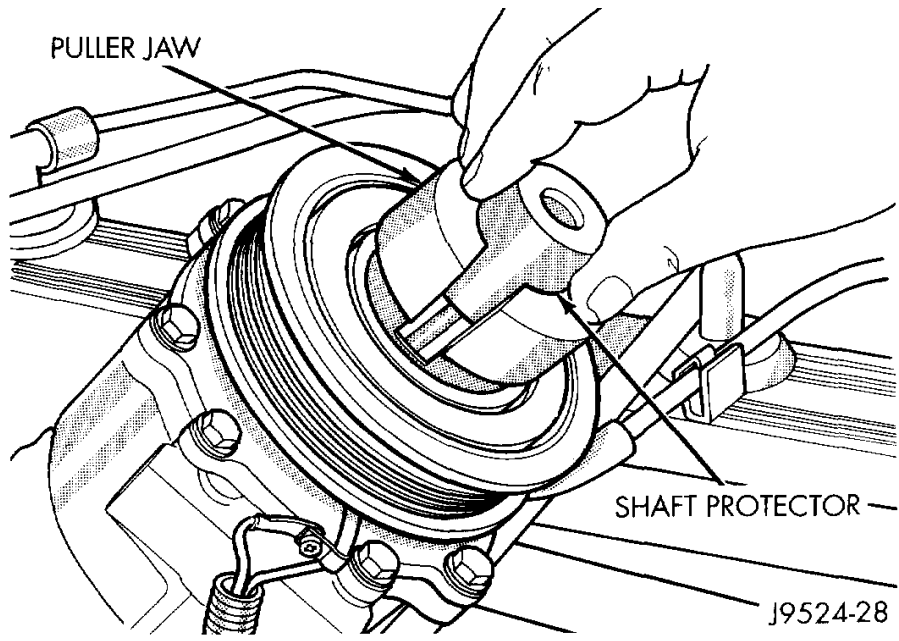


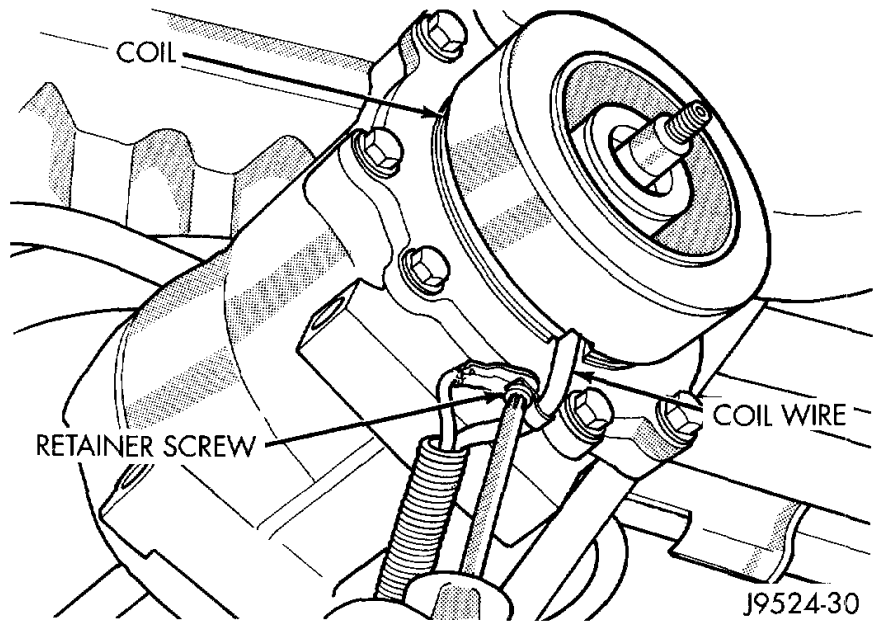


J9524-30

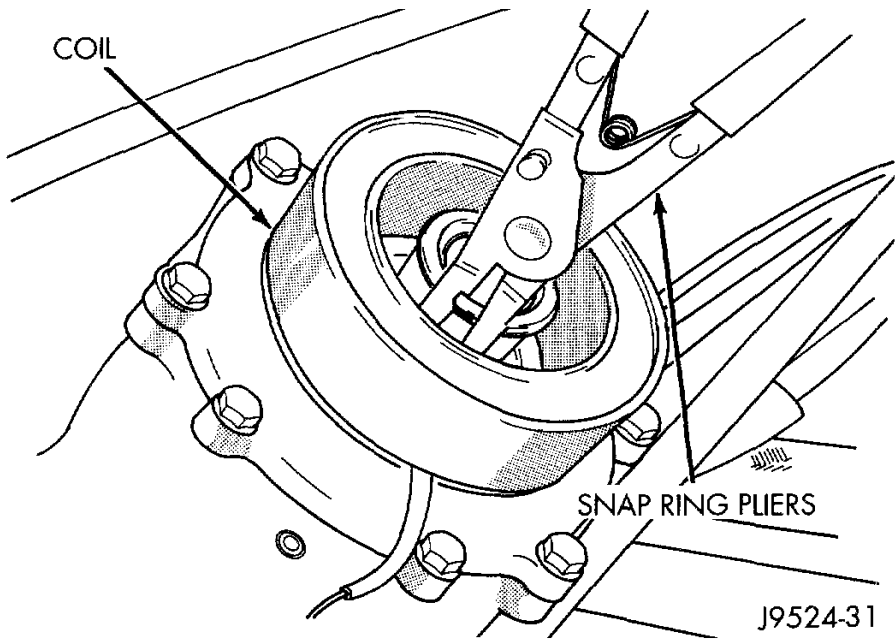

J9524-31

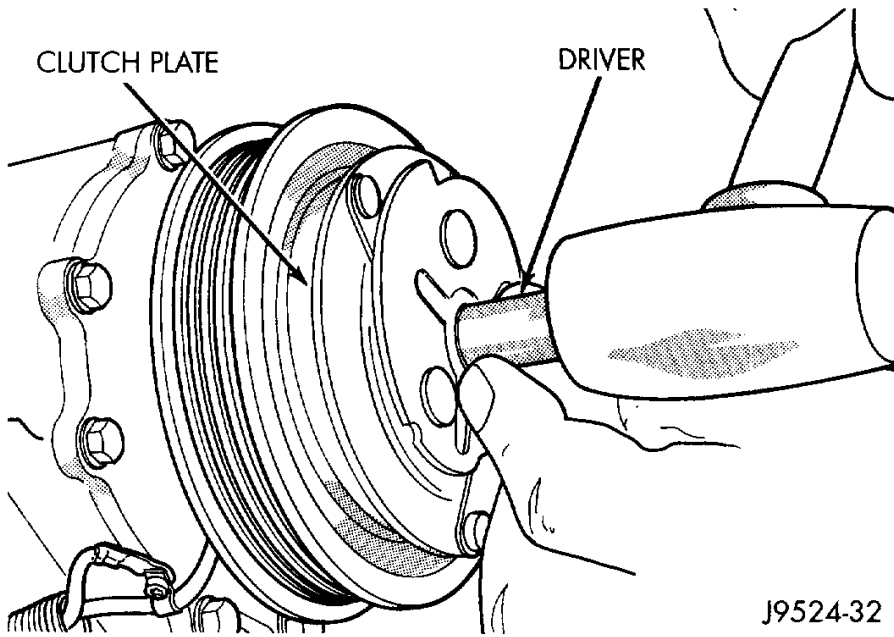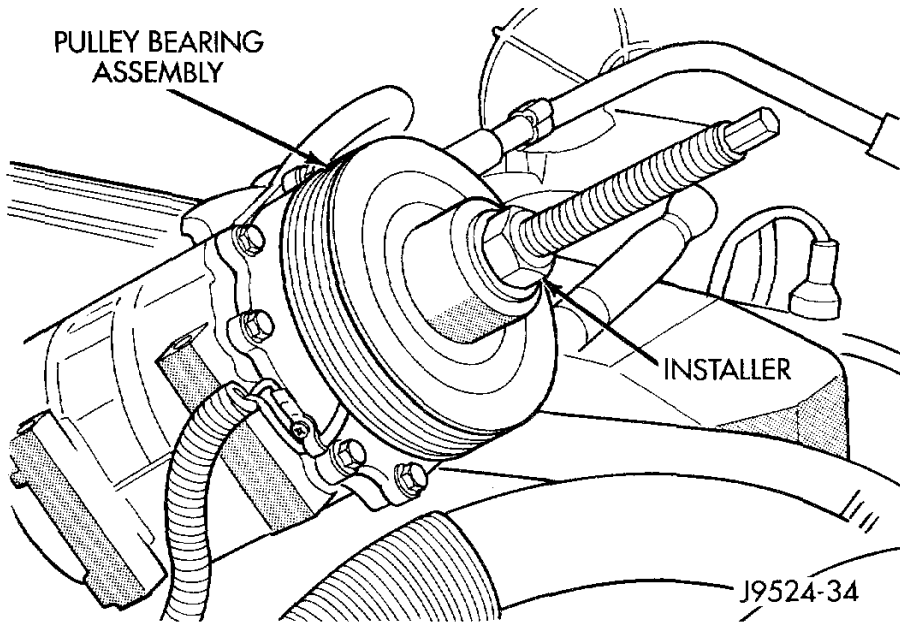

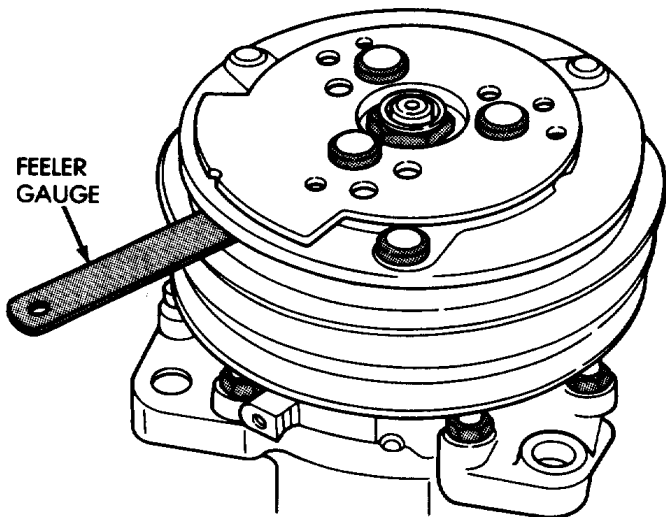

J8924-28

Electrical (itype_27)

Clutch Draw =
2.0 - 3.9 amps @ 12 V
=
± 0.5V @ 70° F

Mechanical (including Torque) (itype_28)

Clutch Air Gap 0.41 - 0.79 mm
(0.016 - 0.031 in.)