

Component Procedures: Daytime Running Lamp

Table of Contents

1. Components (itype_392)
2. Component Tests and General Diagnostics (itype_383)

Component Procedures: Daytime Running Lamp

Components (itype_392)

GENERAL INFORMATION

Canada Only

The

Daytime Running Light

s (Headlamps) System is installed on vehicles manufactured for sale in Canada only. The headlamps are illuminated when the ignition switch is turned to the ON position. The

DRL module

receives a vehicle-moving signal from the vehicle speed sensor. This provides a constant headlamps-on condition as long as the vehicle is moving. The lamps are illuminated at less than 50 percent

of normal intensity

Component Tests and General Diagnostics (itype_383)

CONDITION	POSSIBLE CAUSES	CORRECTION
DAYTIME RUNNING LAMPS DO NOT WORK	<ol style="list-style-type: none">1. Poor connection at DRL module.2. Parking brake engaged.3. Parking brake circuit shorted to ground.4. Headlamp circuit shorted to ground.5. Defective DRL module.	<ol style="list-style-type: none">1. Secure connector on DRL module.2. Disengage parking brake.3. Check voltage on pin 3 of module.4. Check L3 circuit.5. Replace DRL module.