


Component Procedures: Dome Lamp Bulb

Table of Contents

1. Cargo Area Dome Lamp Bulb (Article 2023524)
2. Sound Bar Dome Lamp Bulb (Article 2023525)

Component Procedures: Dome Lamp Bulb

Cargo Area Dome Lamp Bulb (Article 2023524)

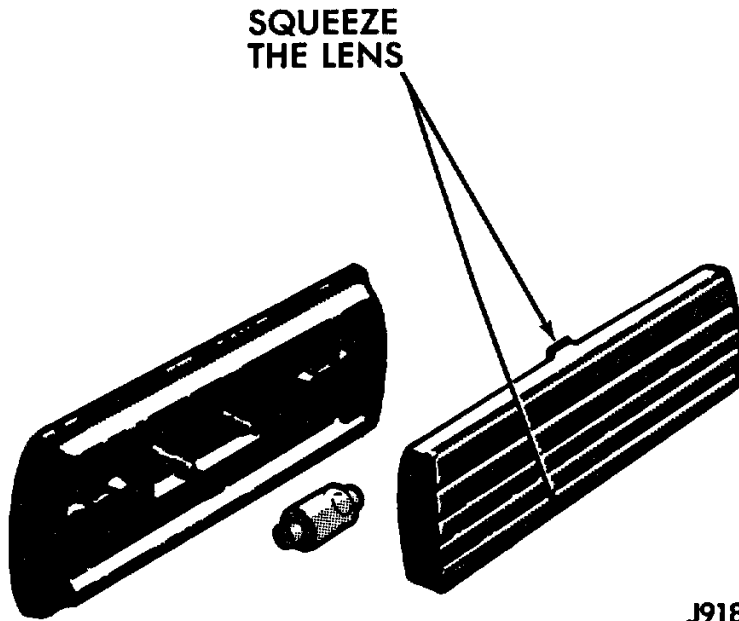

J918L-1

Sound Bar Dome Lamp Bulb (Article 2023525)

REMOVAL

1. Insert a small flat blade between the lamp housing and lamp lens. Carefully pry lamp lens to disengage lens retaining tabs.
2. Separate lens from lamp housing.
3. Grasp bulb and pull from lamp.

INSTALLATION

1. Position bulb in lamp socket and press into place.
2. Position lamp lens on lamp housing and press into place.