

Component Procedures: Distributor

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_392)
3. Procedures (itype_376)
4. Mechanical (including Torque) (itype_28)

Component Procedures: Distributor

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
Distributor	56027027AB	Distributor	249.00	Order By Description.

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Distributor, R&R	B	0.7	0.3
Replace	Distributor, R&R > NOTE > To Replace Camshaft?	B	0.2	0.2
Replace	Distributor, R&R > NOTE > To Replace Gear, Add	B	0.2	0.2
Replace	Distributor, R&R > NOTE > To Replace Shaft As?	B	0.9	0.4

Components (itype_392)

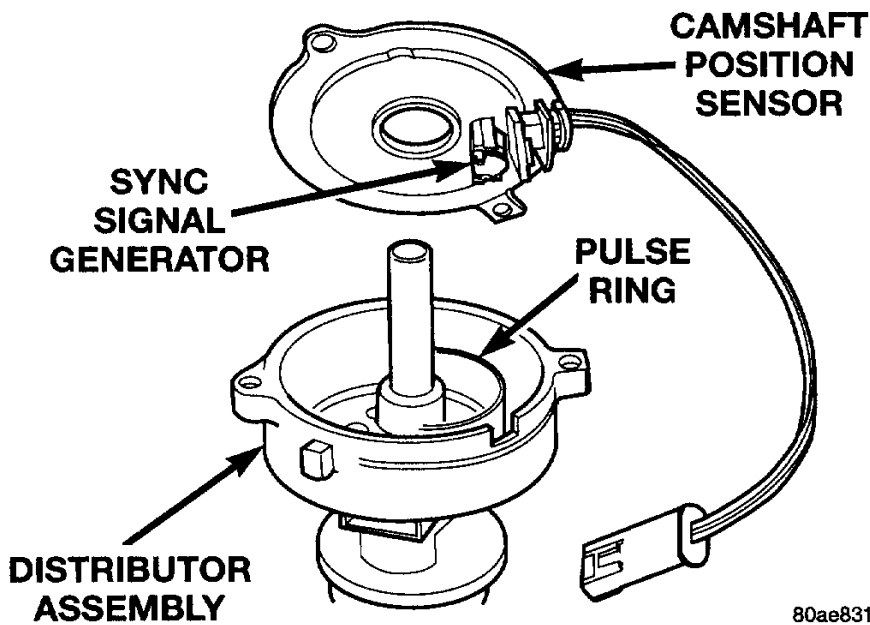



80ae8314

Procedures (itype_376)

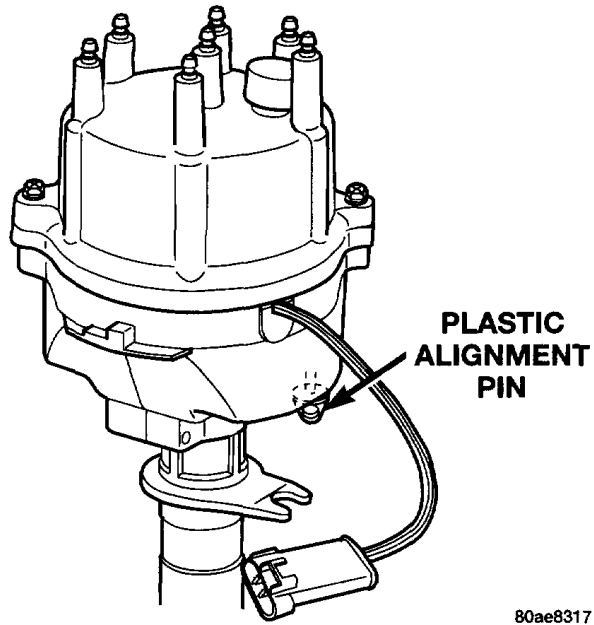

80ae8317

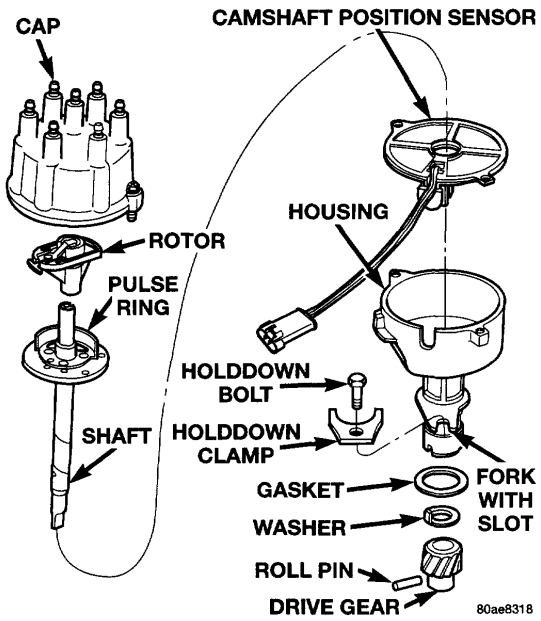

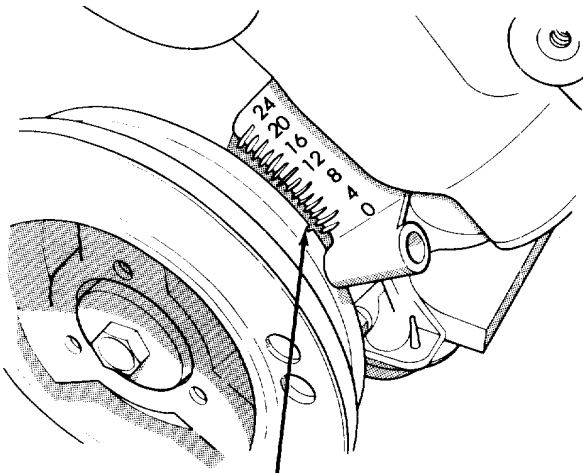


CRANKSHAFT
VIBRATION DAMPER
TIMING MARK

J898D-14

FRONT →






10 O'CLOCK POSITION

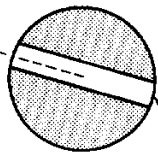

OIL
PUMP
SLOT

J958D-6

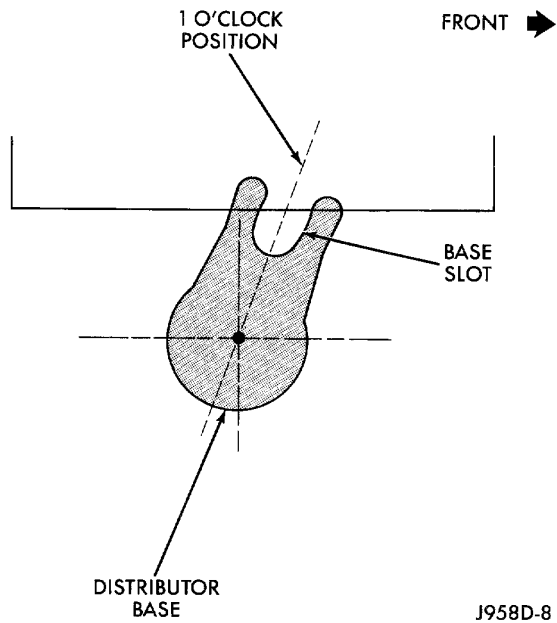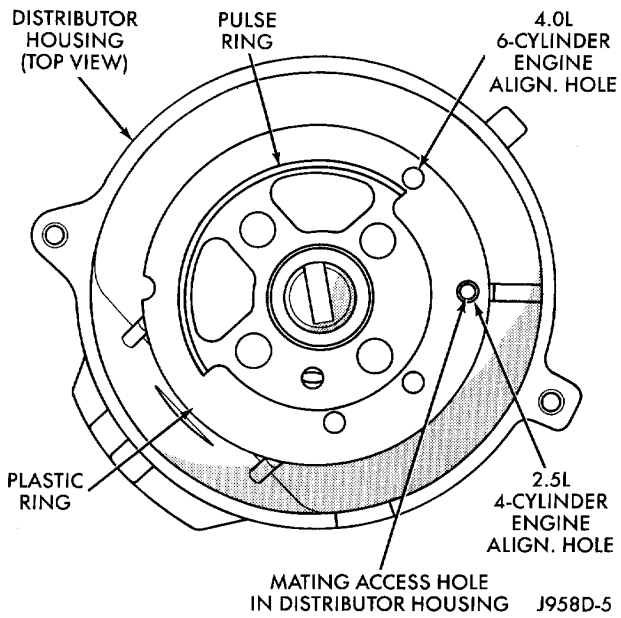

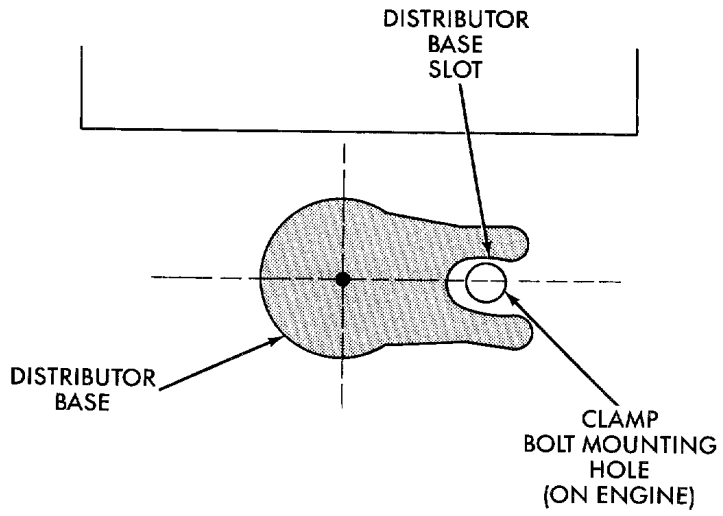

J958D-9

Mechanical (including Torque) (itype_28)

Distributor Hold-Down Clamp Bolt 204 in.lb