

Component Procedures: Firing Order

Table of Contents

1. Mechanical (including Torque) (itype_28)

Component Procedures: Firing Order

Mechanical (including Torque) (itype_28)

Firing Order

1-3-4-2

Clockwise Rotation

