

Component Procedures: Oil Pressure Sensor

Table of Contents

1. Components (itype_392)
2. Connector Views (itype_47)

Component Procedures: Oil Pressure Sensor

Components (itype_392)

OIL PRESSURE SENSOR


-

PCM
INPUT

Sends a signal from the oil pressure sending unit to the Powertrain Control Module (PCM) relating to engine oil pressure

.

Connector Views (itype_47)

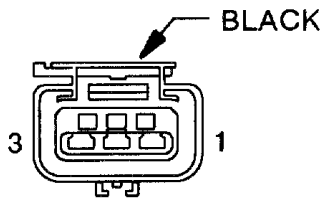

ENGINE OIL PRESSURE SENSOR

ENGINE OIL PRESSURE SENSOR - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	K6 20VT/OR	5V SUPPLY
2	G60 18GY/YL	ENGINE OIL PRESSURE SENSOR SIGNAL
3	K167 20BR/YL	SENSOR GROUND