

Component Procedures: Heater Core

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_392)
3. Components (itype_32)
4. Heater Core Removal and Installation (Article 2038833)

Component Procedures: Heater Core

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Heater Core	4874045	Heater Core	0.00	

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	With A/C	B	4.5	2.0
Replace	Without A/C	B	4.0	1.9

Components (itype_392)

SYSTEM DESCRIPTION


The heater core is located in the heater-A/C housing, under the instrument panel. It is a heat exchanger made of rows of tubes and fins. Engine coolant is circulated through heater hose s to the heater core at all times. As the coolant flows through the heater core, heat removed from the engine is transferred to the heater core fins and tubes. Air directed through the heater core picks up the heat from the heater core fins. The blend air door allows control of the heater output air temperature by controlling how much of the air flowing through the heater-A/C housing is directed through the heater core. The blower motor speed control s the volume of air flowing through the heater-A/C housing. The heater core cannot be repaired and, if faulty or damaged, it must be replaced.

Components (itype_32)

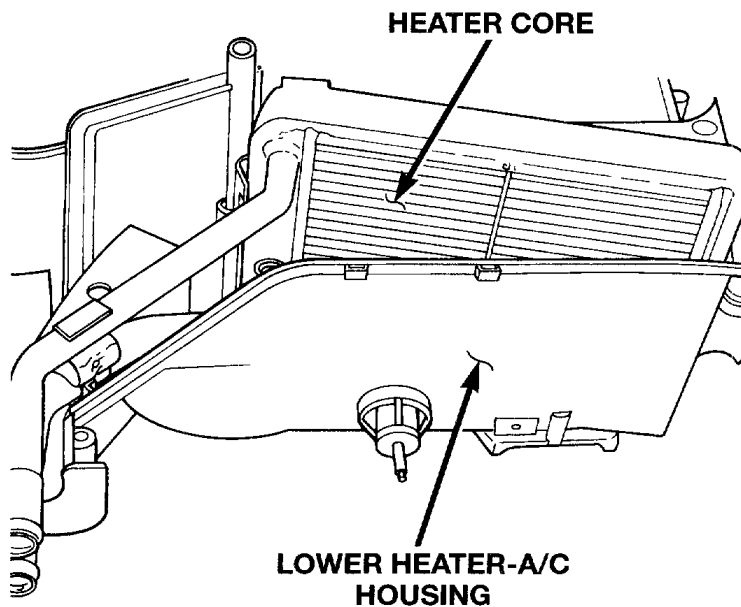

80abd29b

Heater Core Removal and Installation (Article 2038833)

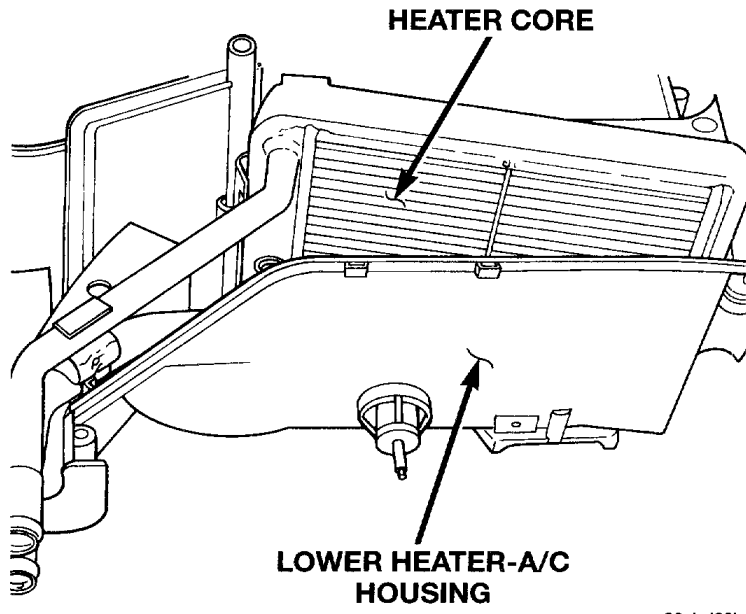

80abd29b