

Component Procedures: Oil Pressure Sender

Table of Contents

1. Parts and Labor (itype_189)
2. Connector Views (itype_47)
3. Mechanical (including Torque) (itype_28)

Component Procedures: Oil Pressure Sender

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
Oil Pressure Sending Unit	56031005	Oil Pressure Sending U?	57.50	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Oil Pressure Sending Unit, R&R	B	0.7	0.4

Connector Views (itype_47)

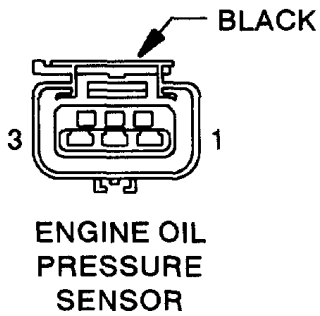

ENGINE OIL PRESSURE SENSOR - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	K6 20VT/OR	5V SUPPLY
2	G60 18GY/YL	ENGINE OIL PRESSURE SENSOR SIGNAL
3	K167 20BR/YL	SENSOR GROUND

Mechanical (including Torque) (itype_28)

Oil Pressure Sending Unit Sending Unit 130 in.lb