

Component Procedures: Parking Light Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Front Parking and Turn Signal Lamp Bulb (Article 2070598)

Component Procedures: Parking Light Bulb

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Each	C	0.4	0.2

Front Parking and Turn Signal Lamp Bulb (Article 2070598)

REMOVAL

1. Remove the park/turn signal lamp bulb socket via the underside of the fender.
2. Rotate the bulb socket one-third turn counterclockwise and separate it from the lamp housing.
3. Pull the bulb straight out of the socket.

INSTALLATION

1. Install the bulb in the socket.
2. Install the bulb and socket in the lamp housing.