

Component Procedures: Turn Signal Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Front Parking and Turn Signal Lamp Bulb (Article 2070573)
3. Tail/Turn Signal/Back-Up Lamp Bulb (Article 2070574)

Component Procedures: Turn Signal Bulb

Parts and Labor (itype_189)

Labor

| Operation | Qualifier | Path | Skill | Std Hrs | Wty Hrs |
|-----------|-----------|------|-------|---------|---------|
| Replace | Each | | C | 0.4 | 0.2 |

Front Parking and Turn Signal Lamp Bulb (Article 2070573)

REMOVAL

1. Remove the park/turn signal lamp bulb socket via the underside of the fender.
2. Rotate the bulb socket one-third turn counterclockwise and separate it from the lamp housing.
3. Pull the bulb straight out of the socket.

INSTALLATION

1. Install the bulb in the socket.
2. Install the bulb and socket in the lamp housing.

Tail/Turn Signal/Back-Up Lamp Bulb (Article 2070574)

