

Component Procedures: Backup Light Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_32)
3. Back-Up Lamp Bulb (Article 2048676)
4. Tail / Turn Signal / Back-Up Lamp Bulb Replacement (Article 2048678)

Component Procedures: Backup Light Bulb

Parts and Labor (itype_189)

Labor

Operation	Qualifier	Path	Skill	Std Hrs	Wty Hrs
Replace	Each		C	0.4	0.2

Components (itype_32)

The back-up lamp bulb is located with-in the tail lamp

Back-Up Lamp Bulb (Article 2048676)

REMOVAL AND INSTALLATION

The Back-up lamp bulb is located with-in the tail lamp

. Refer to the Tail lamp bulb Removal/Installation procedure.

Tail / Turn Signal / Back-Up Lamp Bulb Replacement (Article 2048678)

