

Component Procedures: Windshield Washer Reservoir

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_392)
3. Washer Fluid Reservoir (Article 2087547)
4. Washer Reservoir (Article 2087406)
5. Mechanical (including Torque) (itype_28)

Component Procedures: Windshield Washer Reservoir

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Reservoir, R&R	C	0.5	0.3

Components (itype_392)

SYSTEM DESCRIPTION

A single

washer fluid reservoir

is used for both the front and rear washer systems. The washer fluid reservoir is secured to the inner fender shield, over the left front wheel house in the engine compartment.

Each

washer pump

and motor unit has a barbed nipple, which is installed through a rubber grommet seal inserted in a hole near the bottom of the reservoir. The washer pumps are retained by an interference fit between the barbed nipple and the grommet seal, which is a light press fit.


The

washer reservoir


has a snap-fit filler cap with a rubber gasket. The cap hinges on and is secured to a molded-in hook formation on the reservoir behind the filler neck.

The washer reservoir and filler cap are each available for service.

Washer Fluid Reservoir (Article 2087547)

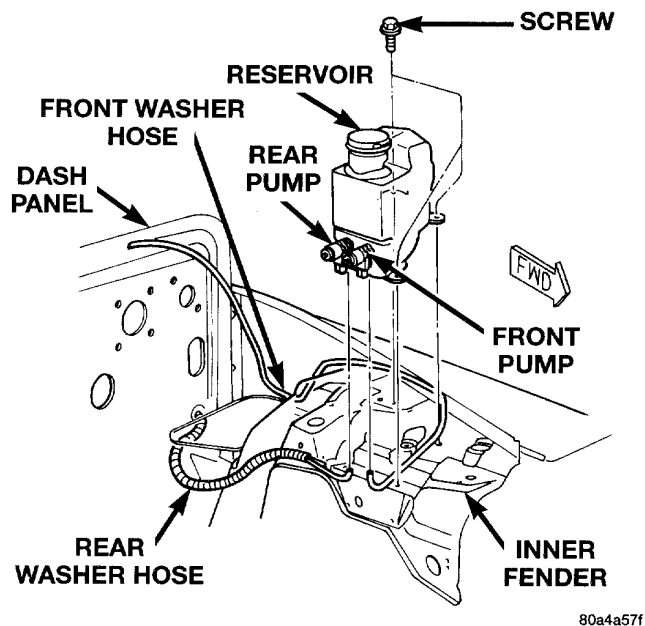

Washer Reservoir (Article 2087406)

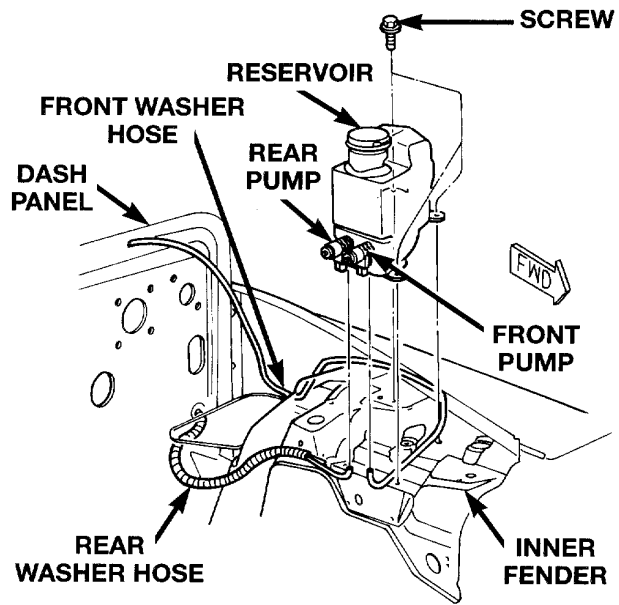

80a4a57f

Mechanical (including Torque) (itype_28)

Tighten the reservoir mounting screws to
4 N.m (35 in. lbs.)