

# **Component Procedures: Brake Switch (Cruise Control)**

## **Table of Contents**

1. Components (itype\_392)

# Component Procedures: Brake Switch (Cruise Control)

## Components (itype\_392)

### SYSTEM DESCRIPTION

Vehicles equipped with the speed control option use a dual function stop lamp switch

. The switch is mounted on the brake pedal mounting bracket under the instrument panel. The PCM monitors the state of the dual function stop lamp switch.