

Component Procedures: Cruise Control Servo Cable

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_392)
3. Components (itype_32)
4. Procedures (itype_376)

Component Procedures: Cruise Control Servo Cable

Parts and Labor (itype_189)

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Cable, R&R	B	0.3	0.2

Components (itype_392)

SYSTEM DESCRIPTION

The speed control servo cable is connected between the speed control vacuum servo diaphragm and the throttle body control linkage. This cable causes the throttle control linkage to open or close the throttle valve in response to movement of the vacuum servo diaphragm.

Components (itype_32)

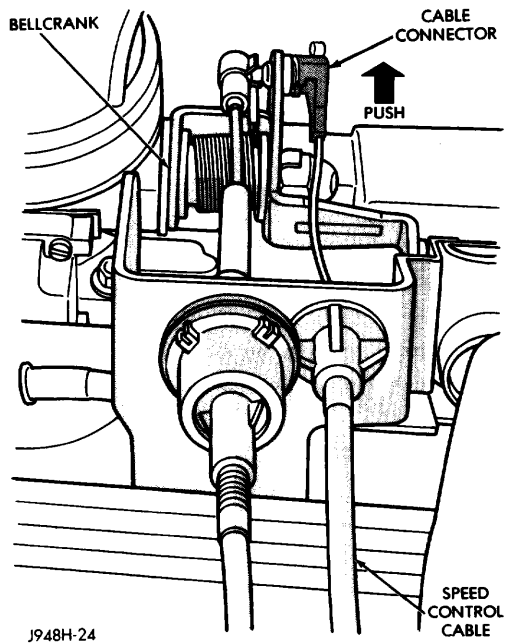

Procedures (itype_376)

