

Component Procedures: Blower Motor Relay

Table of Contents

1. Parts and Labor (itype_189)
2. HVAC Control System (Article 1438931)
3. Relay Location (Article 1438918)

Component Procedures: Blower Motor Relay

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Relay	LF6718811	Relay	15.49	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Relay, R&R	B	0.3	0.2

HVAC Control System (Article 1438931)


Non Standards

- Full-Auto Air Conditioner (1438941)
- Manual Air Conditioner (1438942)

Relay Location (Article 1438918)

RELAY LOCATION

id092100800600

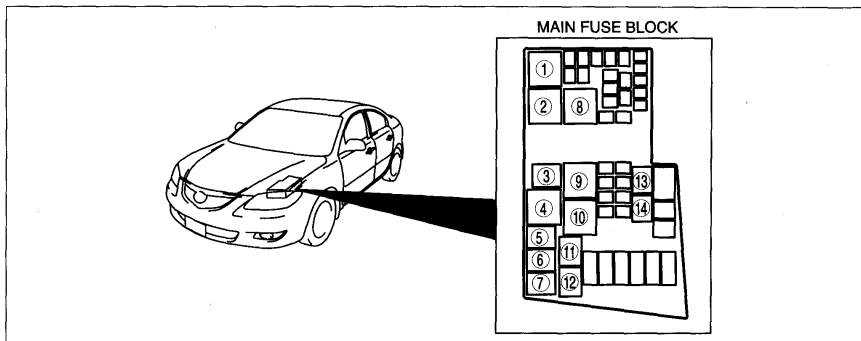

c3u0921w001

1	Main relay
2	Starter relay
3	A/C relay
4	Blower relay (L3 with TC)
5	Injector driver relay (L3 with TC) AT main relay (FS5A-EL)
6	Drive-by-wire relay
7	Horn relay
8	Rear washer relay (L3 with TC)

9	DRL relay (L3 with TC) Blower relay (except L3 with TC)
10	Headlight cleaner relay (L3 with TC) Rear washer relay (except L3 with TC)
11	Rear window defroster relay
12	Front fog light relay
13	Fuel pump relay No.2 (L3 with TC) DRL relay (except L3 with TC) Headlight cleaner relay (except L3 with TC)
14	Fuel pump relay