

Component Procedures: Air Temperature Sensor (Ambient / Intake)

Table of Contents


1. Intake Air Temperature (IAT) Sensor Inspection (Article 1359866)

Component Procedures: Air Temperature Sensor (Ambient / Intake)


Intake Air Temperature (IAT) Sensor Inspection (Article 1359866)

Standard

Ambient temperature (°C {°F})	Resistance (kilohm)
-20 {-4.0}	13.6—18.4
20 {68}	2.21—2.69
60 {140}	0.493—0.667

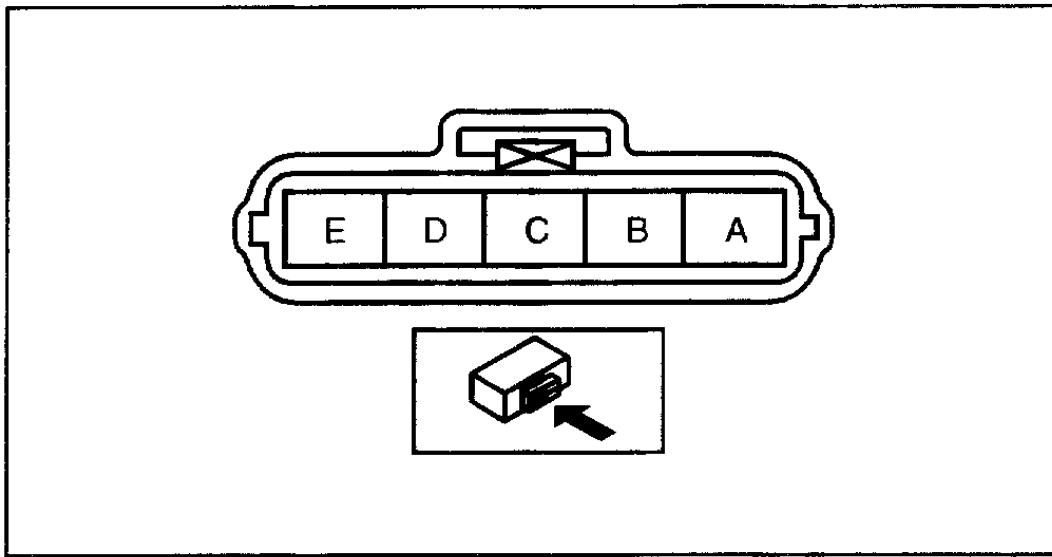

B3E0140W028

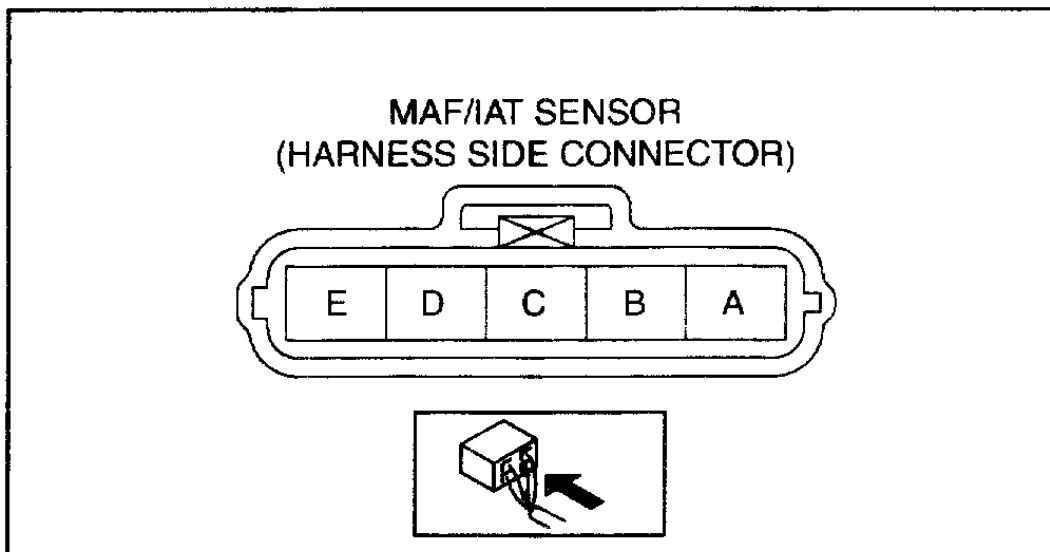

A6E3940W006

PCM
HARNESS SIDE CONNECTOR

1BE	1BA	1AW	1AS	1AO	1AK	1AG	1AC	1Y	1U	1Q	1M	1I	1E	1A
1BF	1BB	1AX	1AT	1AP	1AL	1AH	1AD	1Z	1V	1R	1N	1J	1F	1B

1BG	1BC	1AY	1AU	1AQ	1AM	1AI	1AE	1AA	1W	1S	1O	1K	1G	1C
1BH	1BD	1AZ	1AV	1AR	1AN	1AJ	1AF	1AB	1X	1T	1P	1L	1H	1D



e3u140zw6991