

Component Procedures: Accelerator Pedal Position Sensor

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_32)
3. Accelerator Pedal Position (APP) Sensor Inspection (Article 1359863)

Component Procedures: Accelerator Pedal Position Sensor

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Pedal Travel Sensor	BN8B41600D	Pedal Travel Sensor	276.23	Includes Accelerator Pedal.

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	A.P.P. Sensor	B	0.4	0.0

Components (itype_32)

CONTROL SYSTEM LOCATION INDEX(LF, L3)

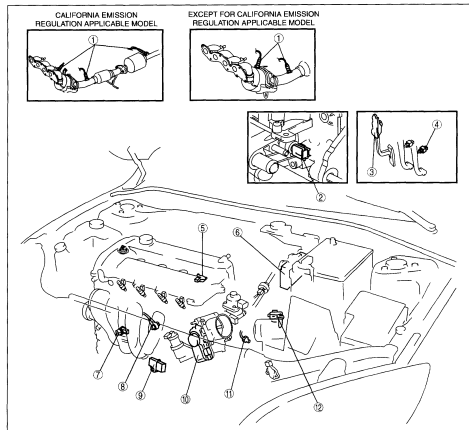


1	HCDS	5	CMP sensor
2	ECT sensor	6	PCM (built-in BARO sensor)
3	APP sensor	7	CKP sensor
4	CPP switch (MTX)		


8	KS
9	MAP sensor
10	TP sensor

11	Neutral switch (MTX)
12	MAF/IAT sensor

Accelerator Pedal Position (APP) Sensor Inspection (Article 1359863)


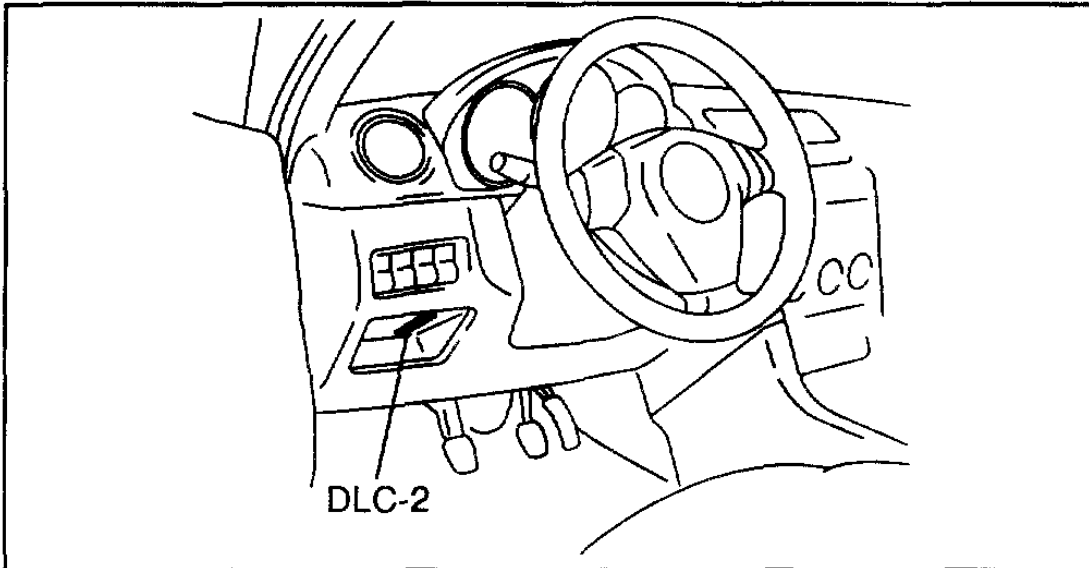


B3E0102W003

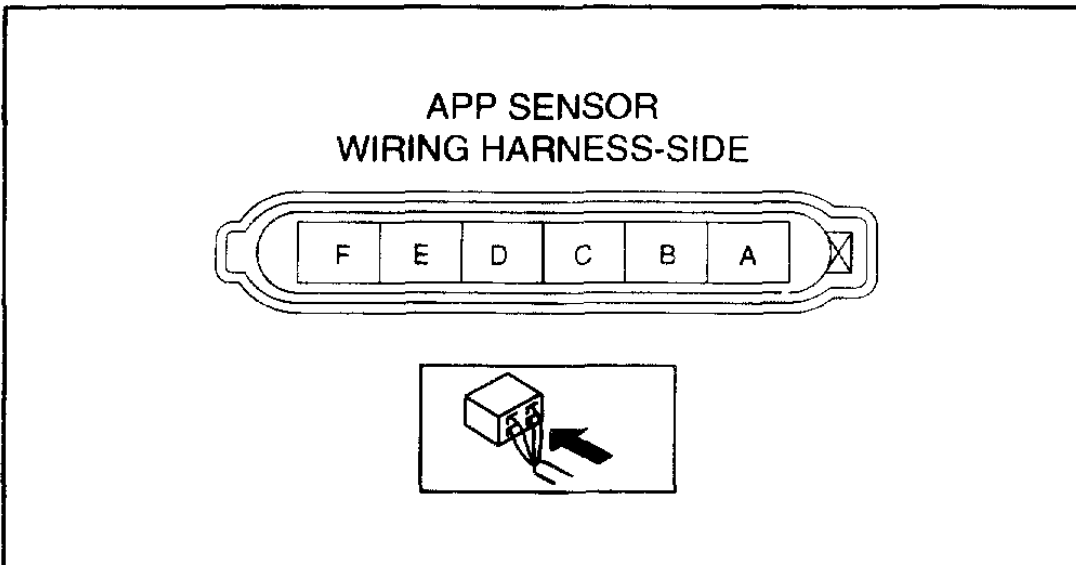

c3u0140w013

MAIN RELAY

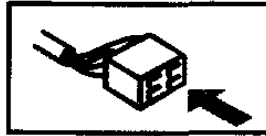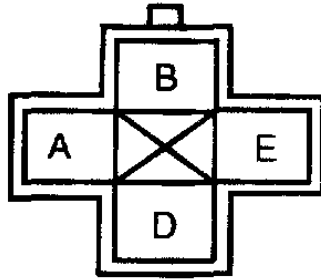

e3u140zw6993

PCM HARNESS SIDE CONNECTOR

1BE	1BA	1AW	1AS	1AO	1AK	1AG	1AC	1Y	1U	1Q	1M	1I	1E	1A
1BF	1BB	1AX	1AT	1AP	1AL	1AH	1AD	1Z	1V	1R	1N	1J	1F	1B

1BG	1BC	1AY	1AU	1AQ	1AM	1AI	1AE	1AA	1W	1S	1O	1K	1G	1C
1BH	1BD	1AZ	1AV	1AR	1AN	1AJ	1AF	1AB	1X	1T	1P	1L	1H	1D



e3u140zw6991