


# **Component Procedures: Brake Fluid Pressure Sensor/Switch**

## **Table of Contents**


1. Brake Fluid Pressure Sensor Inspection (Article 1361612)
2. Brake Fluid Pressure Sensor Initialization Procedure (Article 1365499)

# Component Procedures: Brake Fluid Pressure Sensor/Switch


## Brake Fluid Pressure Sensor Inspection (Article 1361612)

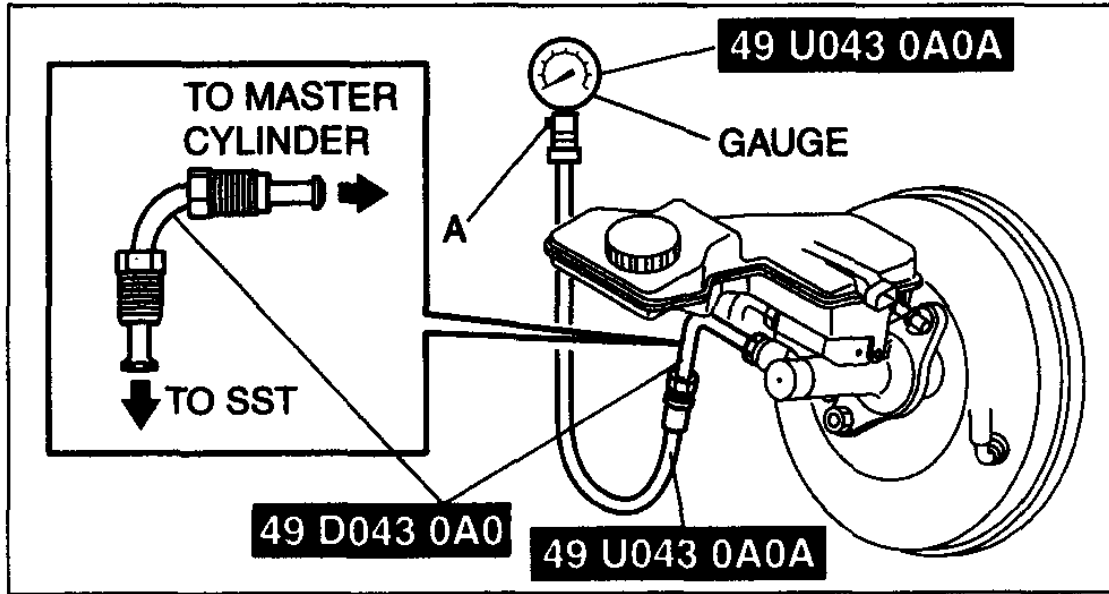

am3zzw0000164

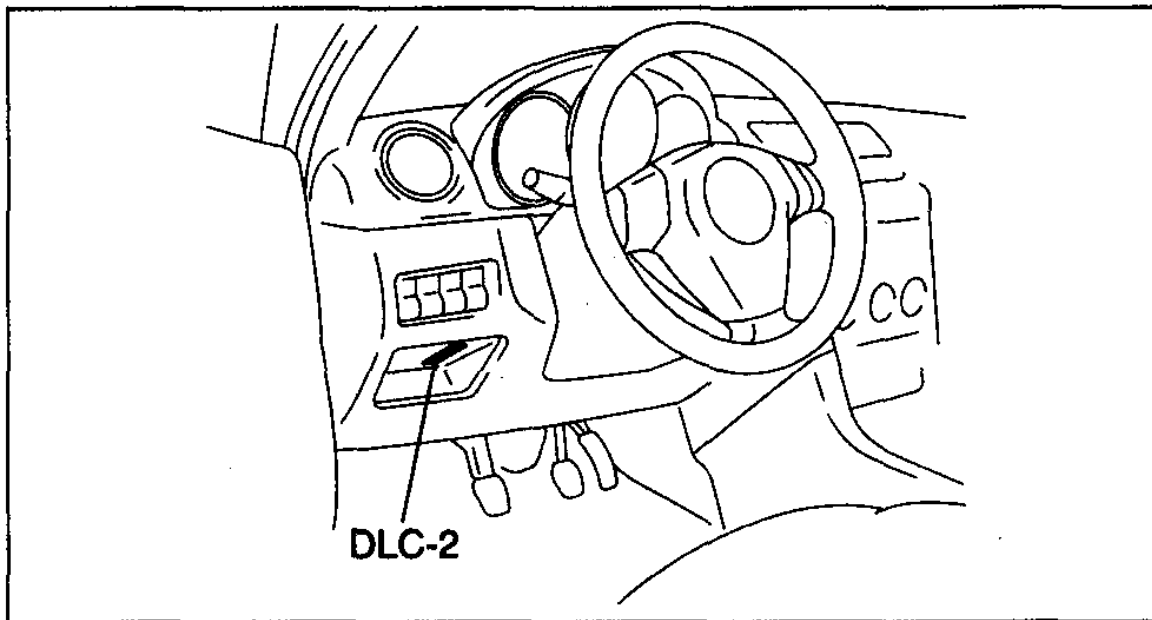

## Brake Fluid Pressure Sensor Initialization Procedure (Article 1365499)

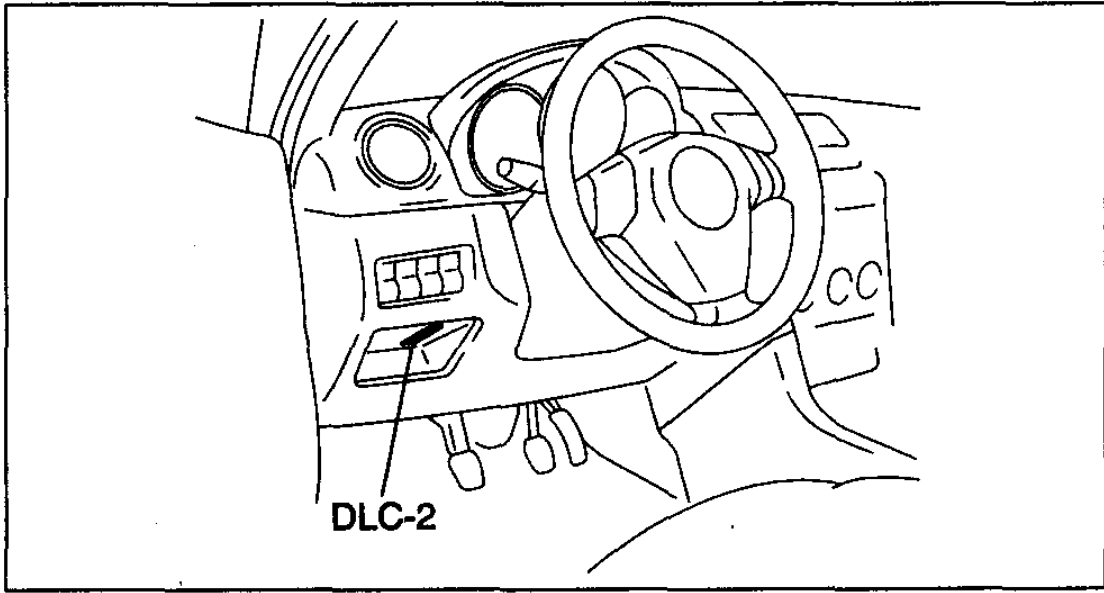

DLC-2

am3zzw0000164