

# Component Procedures: Seats

## Table of Contents

1. Seats (Article 13702)
2. Components (itype\_32)
3. Front Seat Disassembly/Assembly (Article 1383564)
4. Rear Seat Disassembly/Assembly (Article 1366666)
5. Front Seat Removal/Installation (Article 1358096)
6. Rear Seat Removal/Installation (Article 1358214)
7. All Technical Service Bulletins (itype\_100)
8. Customer Interest Bulletins (itype\_109)
9. Repair Tips (itype\_110)
10. Noise (itype\_156)
11. Vibration (itype\_176)


# Component Procedures: Seats

## Seats (Article 13702)

Seats

Page 1 of 1

### Components (itype\_32)

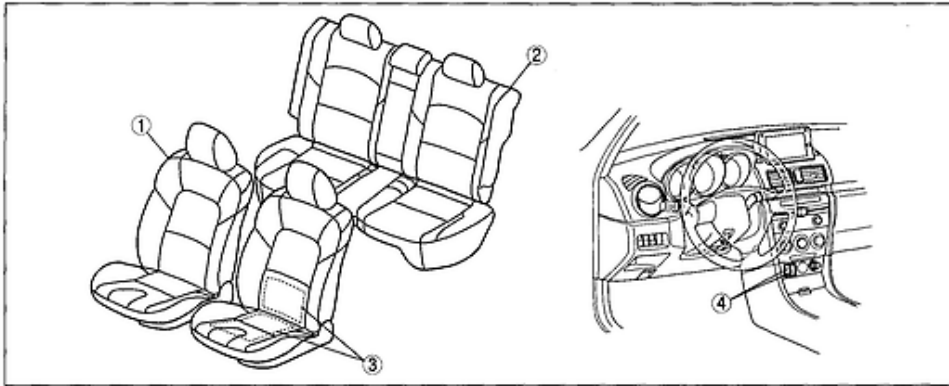


43u0132wa000

1	Front seat
2	Rear seat

3	Seat warmer unit
4	Seat warmer switch

### Front Seat Disassembly/Assembly (Article 1383564)

Driver's Seat

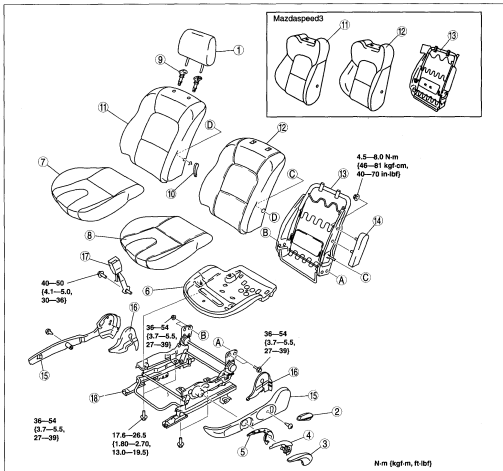


43u00000015

1	Headrest
2	Recliner lever
3	Outer lift lever cover
4	Lift lever
5	Inner lift lever cover
6	Seat cushion frame
7	Seat cushion trim
8	Seat cushion pad
9	Pole guide
10	Lumber support lever


11	Seat back trim
12	Seat back pad
13	Seat back frame
14	Side air bag module
15	Side cover
16	Reverse cover
17	Front buckle
18	Slide adjuster

**Passenger's Seat**

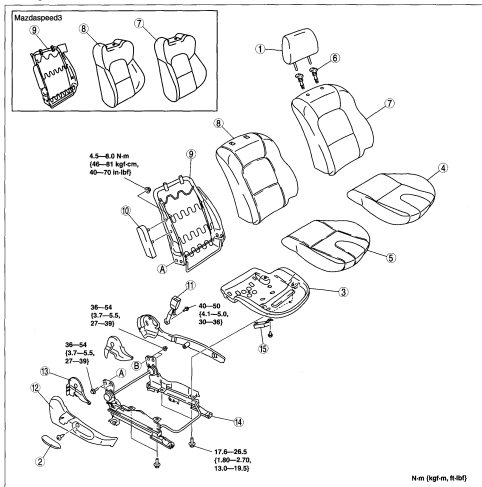


1 Headrest	9 Seat back frame
2 Recliner lever	10 Side air bag module
3 Seat cushion frame	11 Front buckle
4 Seat cushion trim	12 Side cover
5 Seat cushion pad	13 Reverse cover
6 Pole guide	14 Slide adjuster
7 Seat back trim	15 Seat weight sensor control module
8 Seat back pad	

**Rear Seat Disassembly/Assembly (Article 1366666)**

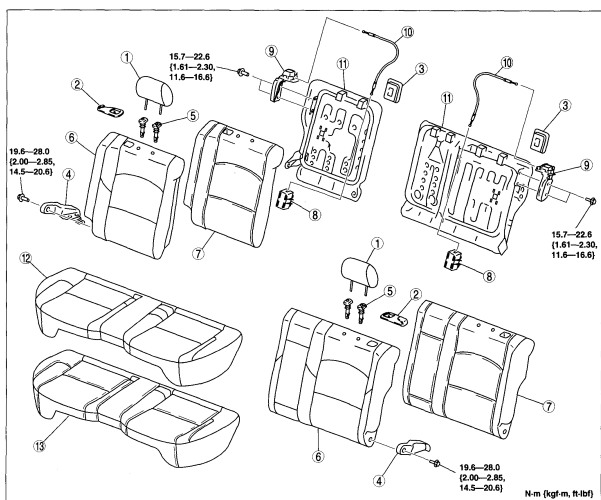


1 Headrest	8 Rear seat back lock
2 Fold-down switch cover	9 Fold-down switch
3 Rear seat back lock cover	10 Remote wire
4 Rear seat back side hinge	11 Rear seat back frame
5 Pole guide	12 Rear seat cushion trim
6 Rear seat back trim	13 Rear seat cushion pad
7 Rear seat back pad	


**Front Seat Removal/Installation (Article 1358096)**

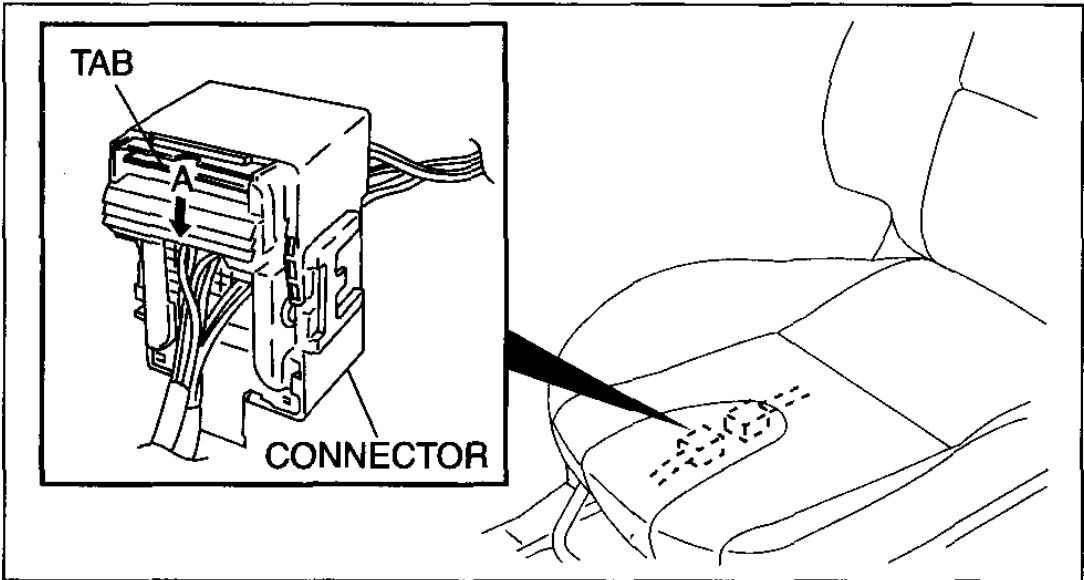


B3E0913W116

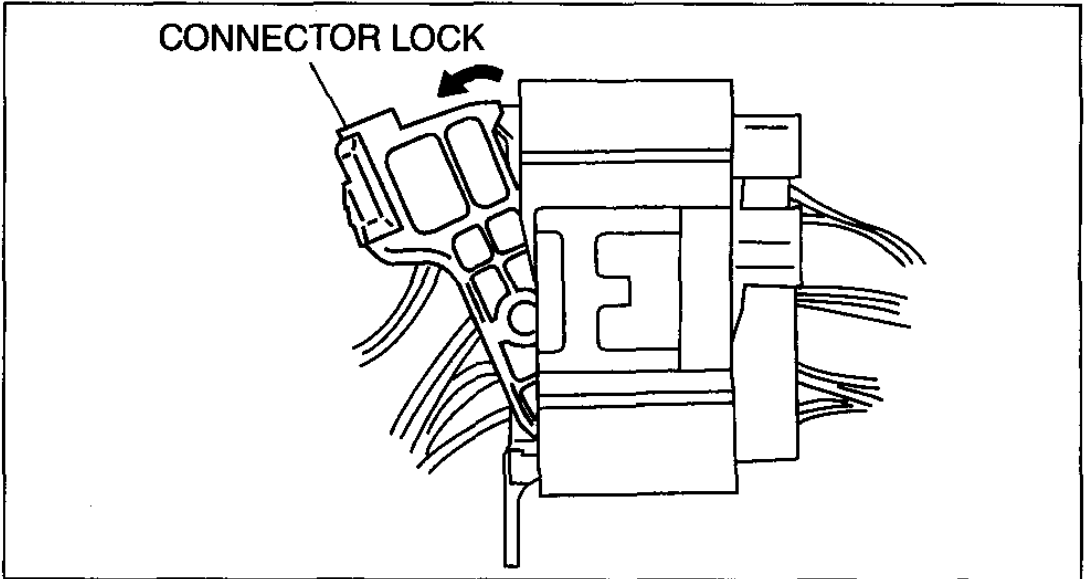


B3E0913W117

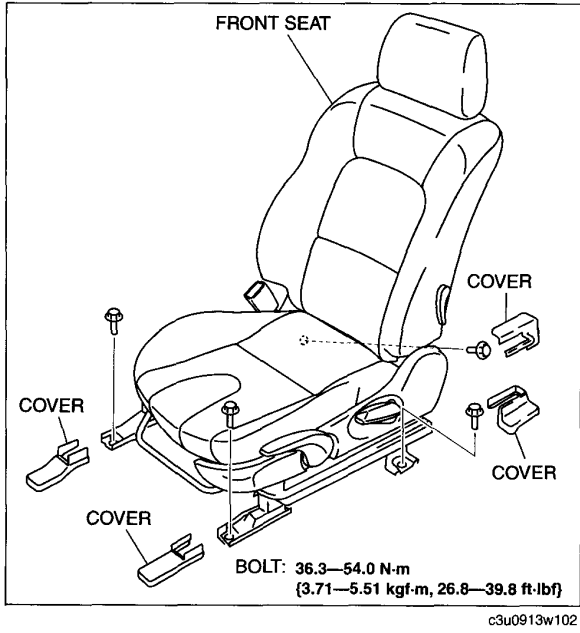


### Rear Seat Removal/Installation (Article 1358214)

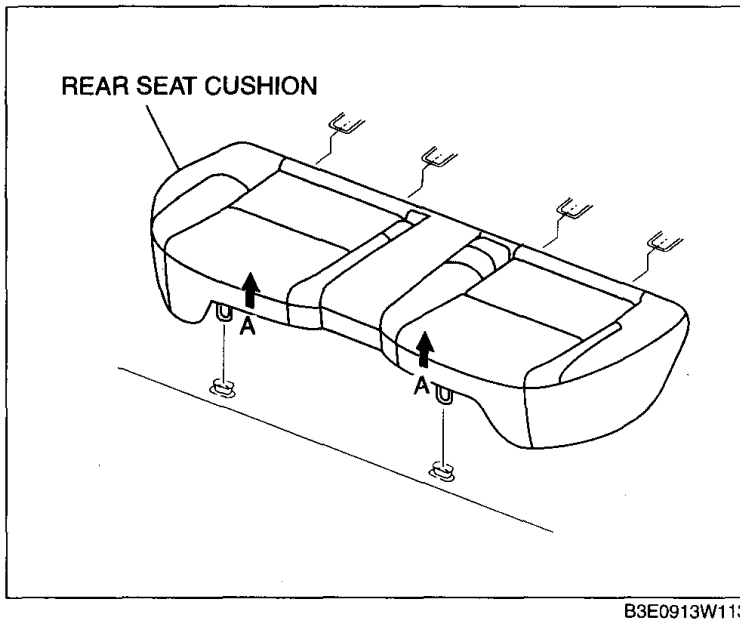

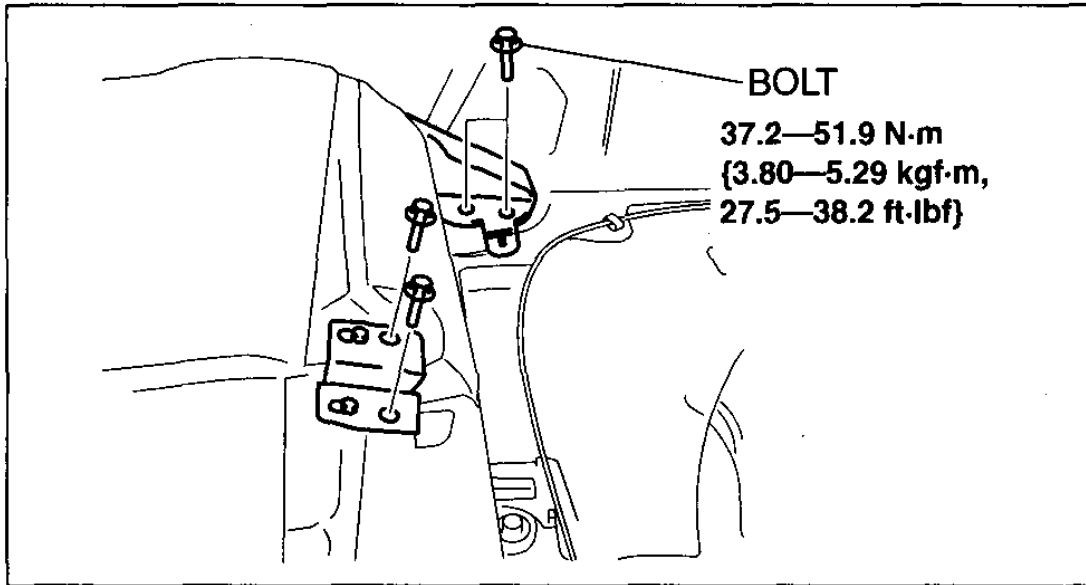

B3E0913W114

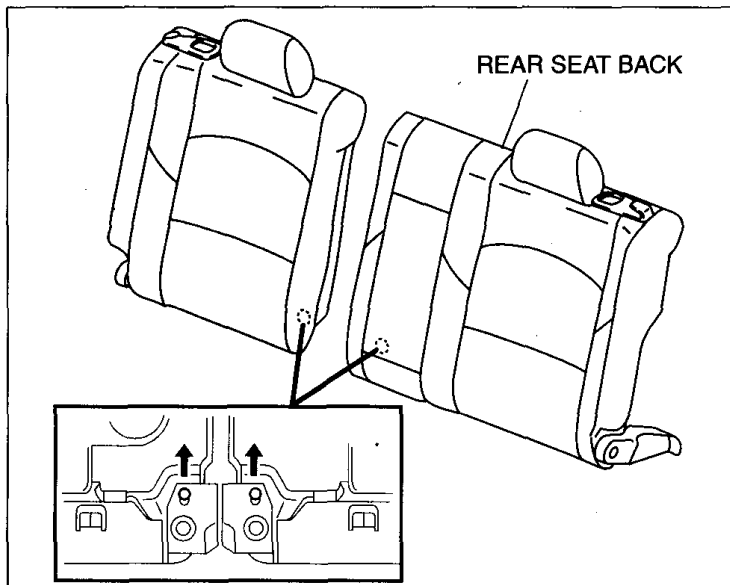

c3u0913w106

### All Technical Service Bulletins (itype\_100)

Tsbs

- Interior - Front Seat Head Rest Rattling Noises (0906309, 2009/10/27)
- Interior - Seats Shake/Make Noise When Braking (0902512, 2012/07/06)
- Interior - Leather Seat Squeaking Noises (0906209, 2009/10/23)
- Interior - Seat Trim Replacement Procedure (0907609, 2009/11/25)
- Interior - Squeaking Noise From Under The Driver's Seat (0906509, 2009/10/27)
- Interior - Front Seat Clunk Noise While Braking (0906009, 2009/10/23)
- Interior - Driver Seat Rattle When Starting Or Stopping (0904312, 2012/11/16)
- Interior - Seat Back Squeaking Noises (0906909, 2009/11/12)

### Customer Interest Bulletins (itype\_109)

Tsbs

- Interior - Front Seat Head Rest Rattling Noises (0906309, 2009/10/27)
- Interior - Seats Shake/Make Noise When Braking (0902512, 2012/07/06)
- Interior - Leather Seat Squeaking Noises (0906209, 2009/10/23)
- Interior - Squeaking Noise From Under The Driver's Seat (0906509, 2009/10/27)

- Interior - Front Seat Clunk Noise While Braking (0906009, 2009/10/23)
- Interior - Driver Seat Rattle When Starting Or Stopping (0904312, 2012/11/16)
- Interior - Seat Back Squeaking Noises (0906909, 2009/11/12)

### **Repair Tips (itype\_110)**

Tsbs

- Interior - Seat Trim Replacement Procedure (0907609, 2009/11/25)

### **Noise (itype\_156)**

Tsbs

- Interior - Front Seat Head Rest Rattling Noises (0906309, 2009/10/27)
- Interior - Seats Shake/Make Noise When Braking (0902512, 2012/07/06)
- Interior - Leather Seat Squeaking Noises (0906209, 2009/10/23)
- Interior - Squeaking Noise From Under The Driver's Seat (0906509, 2009/10/27)
- Interior - Front Seat Clunk Noise While Braking (0906009, 2009/10/23)
- Interior - Driver Seat Rattle When Starting Or Stopping (0904312, 2012/11/16)
- Interior - Seat Back Squeaking Noises (0906909, 2009/11/12)

### **Vibration (itype\_176)**

Tsbs

- Interior - Seats Shake/Make Noise When Braking (0902512, 2012/07/06)