

# **Component Procedures: Fluid Pressure Sensor/Switch**

## **Table of Contents**

1. [FS5A-EI] Automatic Transaxle/Transaxle (Article 1460631)
2. [FS5A-EI] Automatic Transmission/Transaxle (Article 1461012)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1461249)

## **Component Procedures: Fluid Pressure Sensor/Switch**

### **[FS5A-EI] Automatic Transaxle/Transaxle (Article 1460631)**

Non Standards

- Automatic Transaxle Location Index (1460632)

### **[FS5A-EI] Automatic Transmission/Transaxle (Article 1461012)**

Non Standards

- Oil Pressure Switch Removal/Installation (1461013)

### **[FS5A-EI] Automatic Transmission/Transaxle (Article 1461249)**

Non Standards

- Oil Pressure Switch Inspection (1378883)