

# **Component Procedures: Torque Converter Clutch Solenoid**

## **Table of Contents**

1. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463684)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463687)
3. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463718)
4. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463720)

# **Component Procedures: Torque Converter Clutch Solenoid**

## **[FS5A-EI] Automatic Transmission/Transaxle (Article 1463684)**

Non Standards

- Solenoid Valve Removal/Installation (Primary Control Valve Body) (1463685)
- Solenoid Valve Removal/Installation (Secondary Control Valve Body) (1463686)

## **[FN4A-EI] Automatic Transmission/Transaxle (Article 1463687)**

Non Standards

- Solenoid Valve Removal/Installation (1463688)

## **[FN4A-EI] Automatic Transmission/Transaxle (Article 1463718)**

Non Standards

- Solenoid Valve Inspection (1463719)

## **[FS5A-EI] Automatic Transmission/Transaxle (Article 1463720)**

Non Standards

- Solenoid Valve Inspection (Secondary Control Valve Body) (1463721)
- Solenoid Valve Inspection (Primary Control Valve Body) (1463722)