

Component Procedures: Shift Solenoid

Table of Contents

1. [FN4A-EI] Automatic Transmission/Transaxle (Article 1455626)
2. [FS5A-EI] Automatic Transaxle/Transaxle (Article 1455628)
3. [FN4A-EI] Automatic Transmission/Transaxle (Article 1462983)
4. [FS5A-EI] Automatic Transmission/Transaxle (Article 1462985)
5. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463085)
6. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463086)

Component Procedures: Shift Solenoid

[FN4A-EI] Automatic Transmission/Transaxle (Article 1455626)

Non Standards

- Automatic Transaxle Location Index (1455627)

[FS5A-EI] Automatic Transaxle/Transaxle (Article 1455628)

Non Standards

- Automatic Transaxle Location Index (1455629)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1462983)

Non Standards

- Solenoid Valve Removal/Installation (1462984)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1462985)

Non Standards

- Solenoid Valve Removal/Installation (Primary Control Valve Body) (1462986)
- Solenoid Valve Removal/Installation (Secondary Control Valve Body) (1462987)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1463085)

Non Standards

- Solenoid Valve Inspection (1382657)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1463086)

Non Standards

- Solenoid Valve Inspection (Secondary Control Valve Body) (1378882)
- Solenoid Valve Inspection (Primary Control Valve Body) (1378881)