

Component Procedures: Traction Control Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Dynamic Stability Control (Article 1461502)
3. DSC Off Switch Removal/Installation (Article 1461911)
4. DSC Off Switch Inspection (Article 1361632)

Component Procedures: Traction Control Switch

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Switch	BP4L664T0	Switch	86.01	

Dynamic Stability Control (Article 1461502)

Non Standards


- DSC Location Index (1461503)

DSC Off Switch Removal/Installation (Article 1461911)

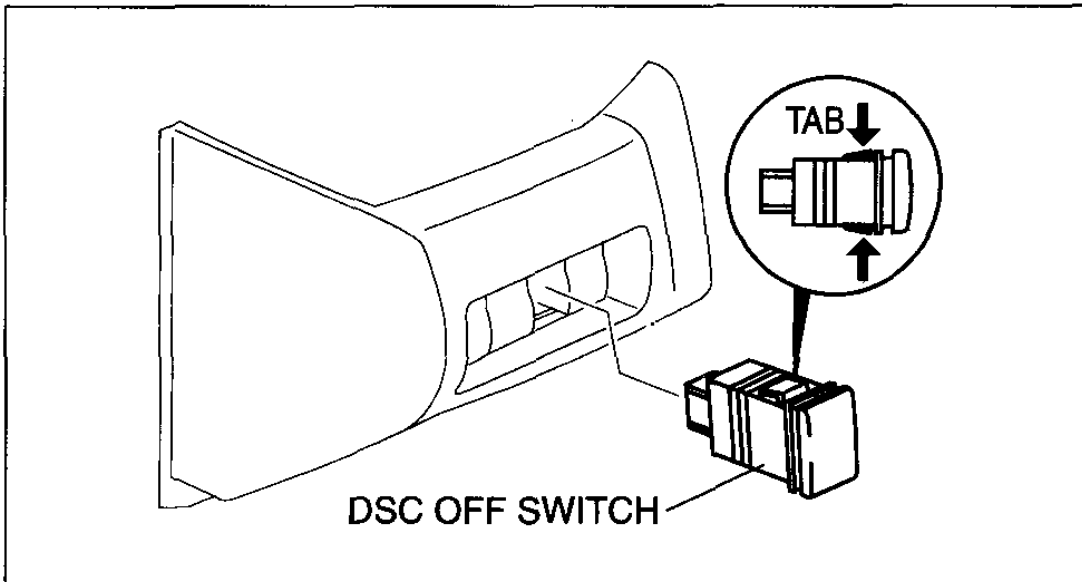




am3uuw0000028

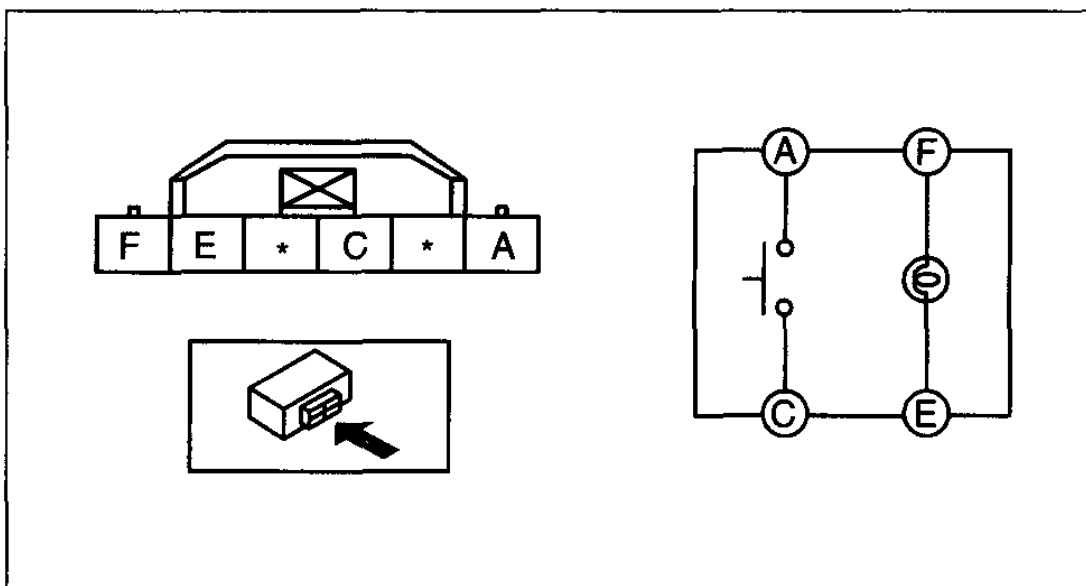DSC Off Switch Inspection (Article 1361632)



am3zzw0000265

 : Bulb
  : Continuity

Condition	Terminal			
	A	C	F	E
Switch pressed				
Switch released				

am3zzw0000265