

Component Procedures: Transmission Temperature Sensor/Switch

Table of Contents

1. [FN4A-EI] Automatic Transmission/Transaxle (Article 1454441)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1464054)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1464056)
4. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463868)
5. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463870)

Component Procedures: Transmission Temperature Sensor/Switch

[FN4A-EI] Automatic Transmission/Transaxle (Article 1454441)

Non Standards

- Automatic Transaxle Location Index (1454442)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1464054)

Non Standards

- Transaxle Fluid Temperature (TFT) Sensor Removal/Installation (1464055)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1464056)

Non Standards

- Transaxle Fluid Temperature (TFT) Sensor Removal/Installation (1464057)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1463868)

Non Standards

- Transaxle Fluid Temperature (TFT) Sensor Inspection (1463869)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1463870)

Non Standards

- Transaxle Fluid Temperature (TFT) Sensor Inspection (1463871)