

Component Procedures: Compressor HVAC

Table of Contents

1. Parts and Labor (itype_189)
2. Electrical (OE) (itype_21)
3. Removal and Replacement (itype_401)

Component Procedures: Compressor HVAC

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Compressor > From 1/1/07	CC4361K00D	Compressor	533.33	Includes Clutch Coil.

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Compressor, R&R	B	1.2	0.8

Electrical (OE) (itype_21)

For information regarding diagrams for this component, please refer to Heating and Air Conditioning Diagrams.


See: Heating and Air Conditioning > Electrical

Removal and Replacement (itype_401)

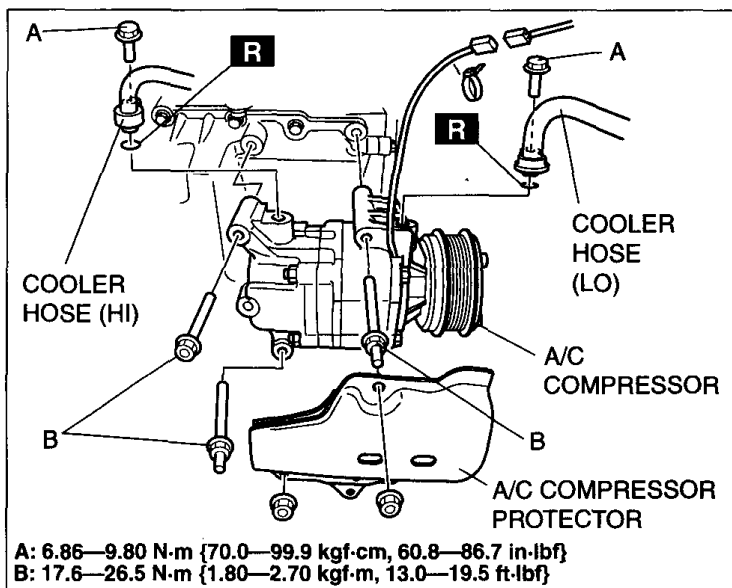

b3a0711w011

NEW A/C COMPRESSOR OLD A/C COMPRESSOR

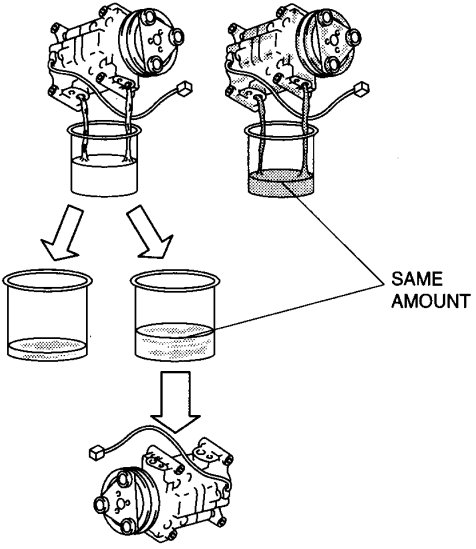

am3uuw0000061