

Component Procedures: Transmission Cooler

Table of Contents

1. Parts and Labor (itype_189)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463519)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463521)
4. [FN4A-EI] Automatic Transmission/Transaxle (Article 1463279)
5. [FS5A-EI] Automatic Transmission/Transaxle (Article 1463281)
6. All Technical Service Bulletins (itype_100)
7. Repair Tips (itype_110)

Component Procedures: Transmission Cooler

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Oil Cooler, R&R	C	1.5	1.2

[FN4A-EI] Automatic Transmission/Transaxle (Article 1463519)

Non Standards

- Oil Cooler Flushing (1463520)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1463521)

Non Standards

- Oil Cooler Flushing (1463522)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1463279)

Non Standards

- Oil Cooler Removal/Installation (1463280)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1463281)

Non Standards

- Oil Cooler Removal/Installation (1463282)

All Technical Service Bulletins (itype_100)

Tsbs

- A/T - Cooler Line Flushing Procedures (0500811, 2011/09/21)

Repair Tips (itype_110)

Tsbs

- A/T - Cooler Line Flushing Procedures (0500811, 2011/09/21)