


Component Procedures: Air Register

Table of Contents


1. Removal and Replacement (itype_401)

Component Procedures: Air Register


Removal and Replacement (itype_401)

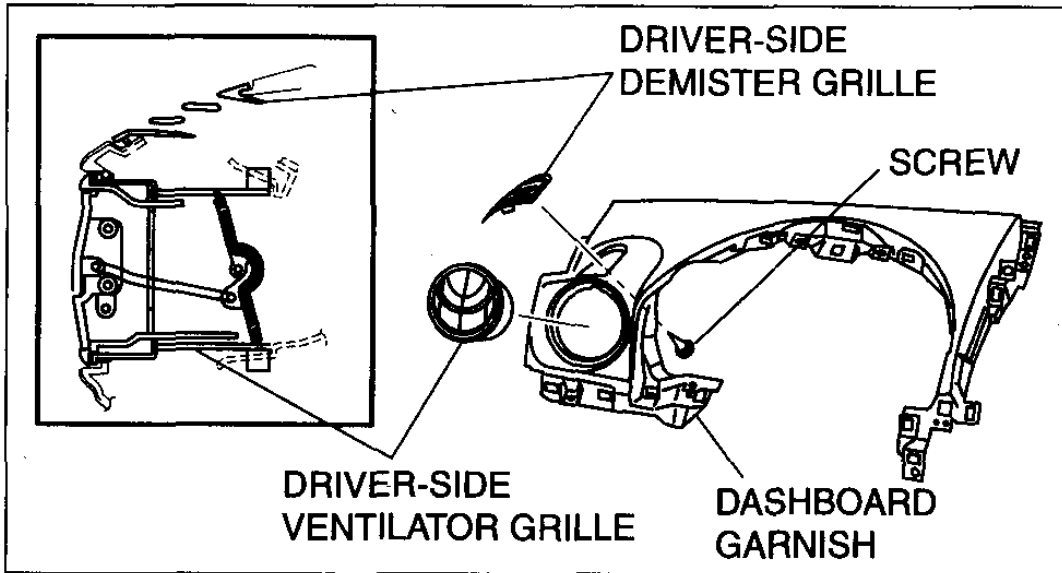

B3E0917W112

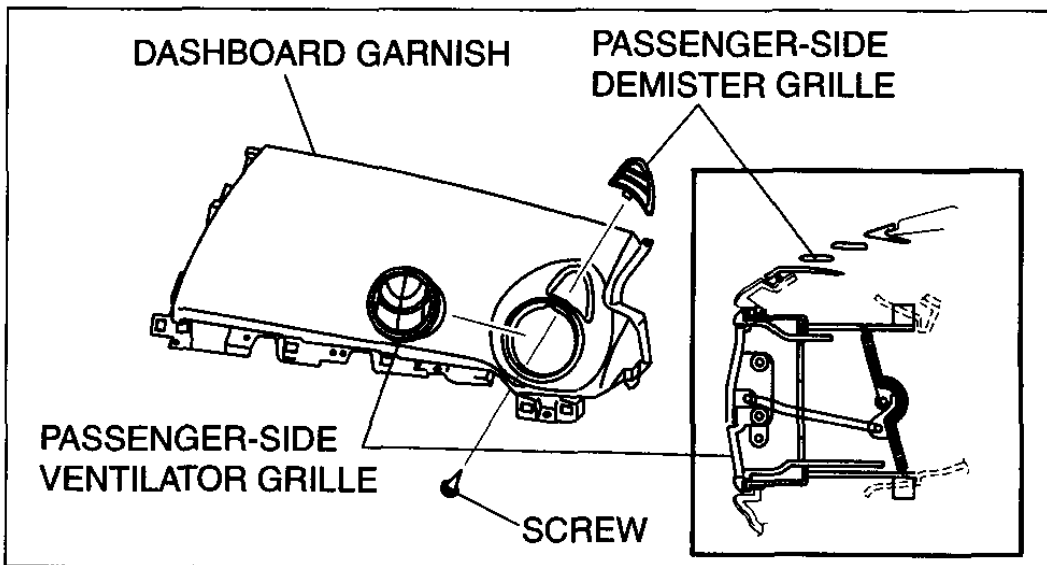

B3E0917W113

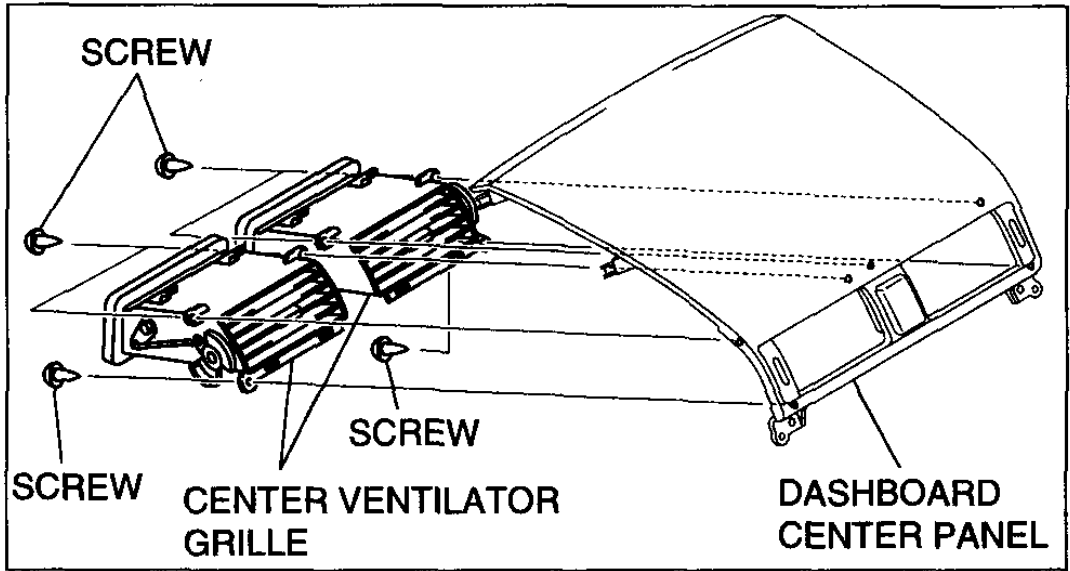

B3E0917W114