

Component Procedures: Clutch Switch

Table of Contents


1. Components (itype_32)
2. Component Tests and General Diagnostics (itype_383)

Component Procedures: Clutch Switch

Components (itype_32)

CONTROL SYSTEM LOCATION INDEX(LF, L3)

00140W023

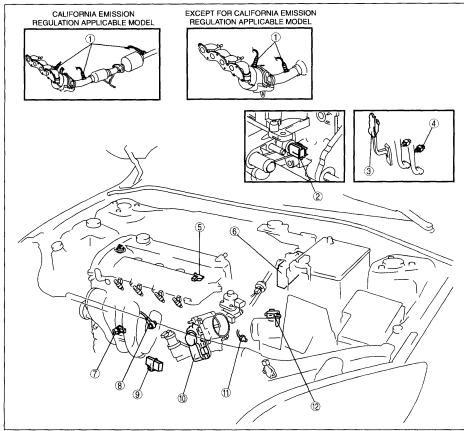


1	HO2S
2	ECT sensor
3	APP sensor
4	CPP switch (MTX)

5	CMP sensor
6	PCM (built-in BARO sensor)
7	CKP sensor

8	KS
9	MAP sensor
10	TP sensor

11	Neutral switch (MTX)
12	MAF/IAT sensor


Component Tests and General Diagnostics (itype_383)

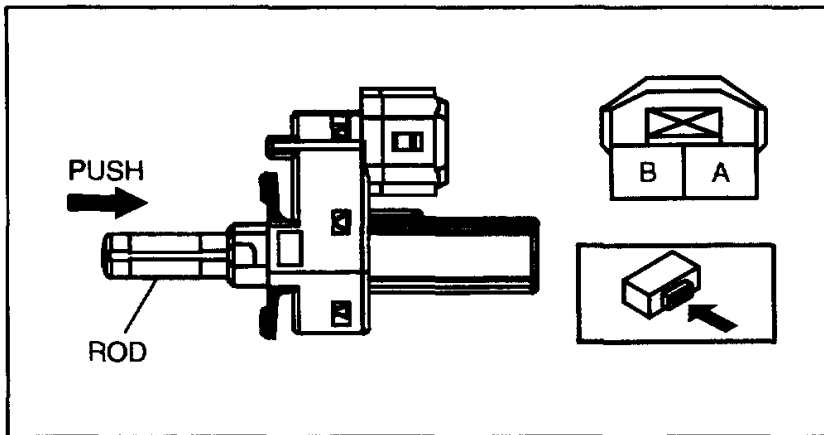

B3E0140W023

Measurement condition	Continuity
Push the rod.	No continuity
Except above	Continuity detected

CPP SWITCH
HARNESS SIDE CONNECTOR

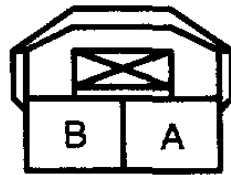

e3u140zw6204

PCM
HARNESS SIDE CONNECTOR

1BE	1BA	1AW	1AS	1AO	1AK	1AG	1AC	1Y	1U	1Q	1M	1I	1E	1A
1BF	1BB	1AX	1AT	1AP	1AL	1AH	1AD	1Z	1V	1R	1N	1J	1F	1B

1BG	1BC	1AY	1AU	1AQ	1AM	1AI	1AE	1AA	1W	1S	1O	1K	1G	1C
1BH	1BD	1AZ	1AV	1AR	1AN	1AJ	1AF	1AB	1X	1T	1P	1L	1H	1D



e3u140zw6991