

Component Procedures: Fuel Rail

Table of Contents

1. Parts and Labor (itype_189)
2. Removal and Replacement (itype_401)

Component Procedures: Fuel Rail

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Fuel Rail	L3G213150	Fuel Rail	334.78	

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Fuel Rail, R&R	B	0.9	0.6

Removal and Replacement (itype_401)


1	Quick release connector
2	Fuel distributor
3	Injector clip
4	Fuel injector

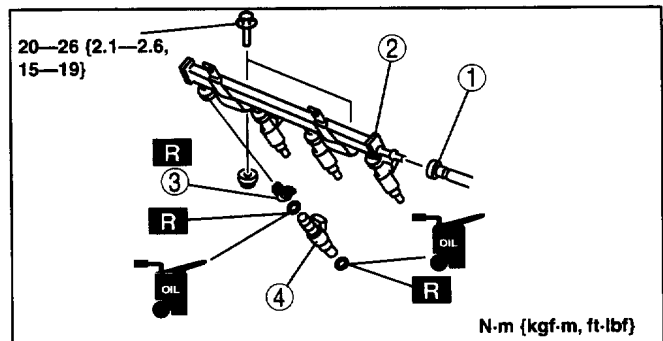


B3E0114W017

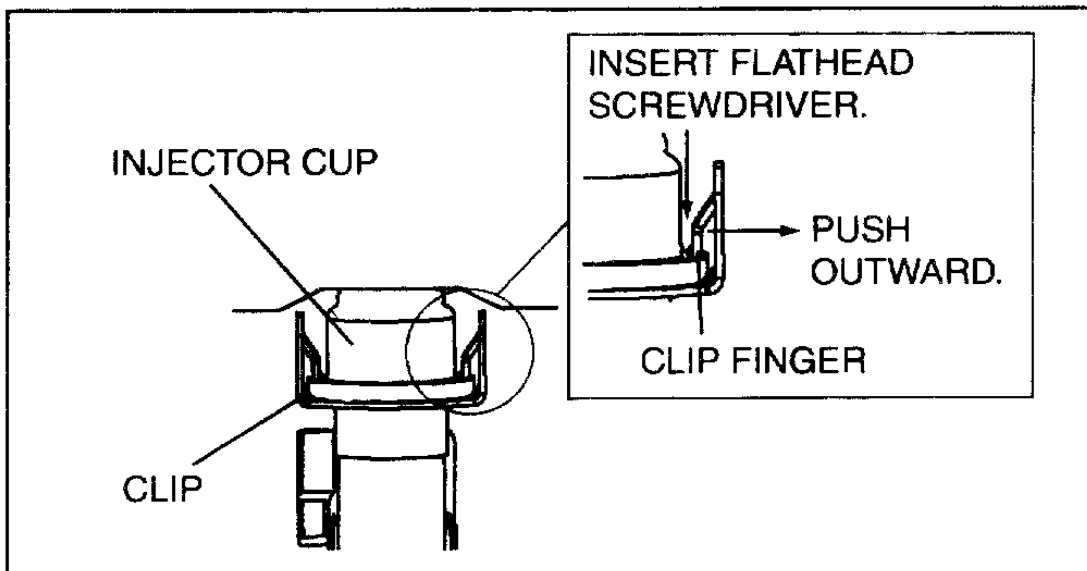


B3E0114W019

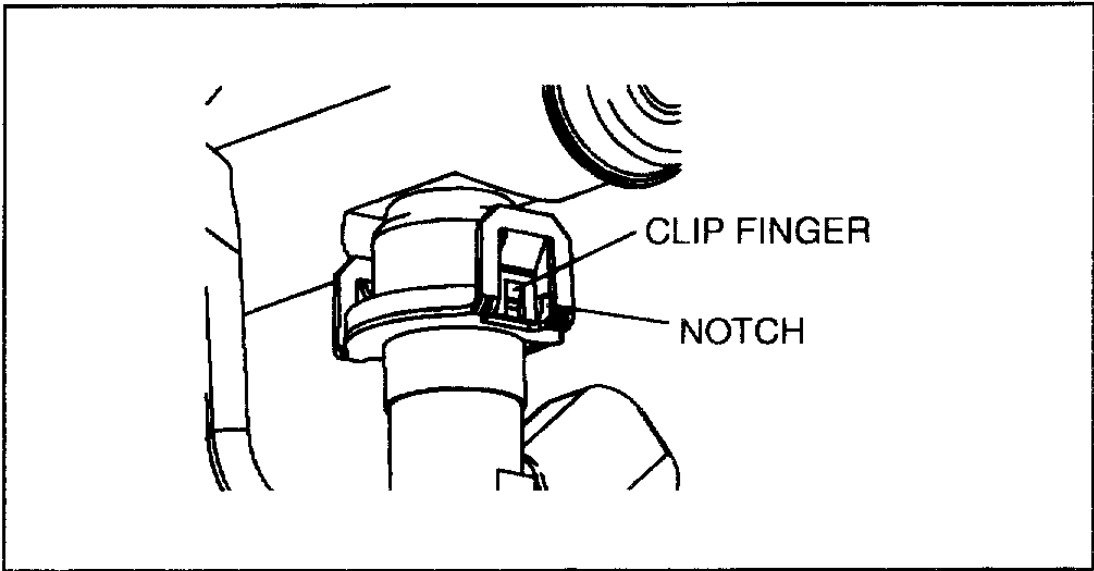

B3E0114W020

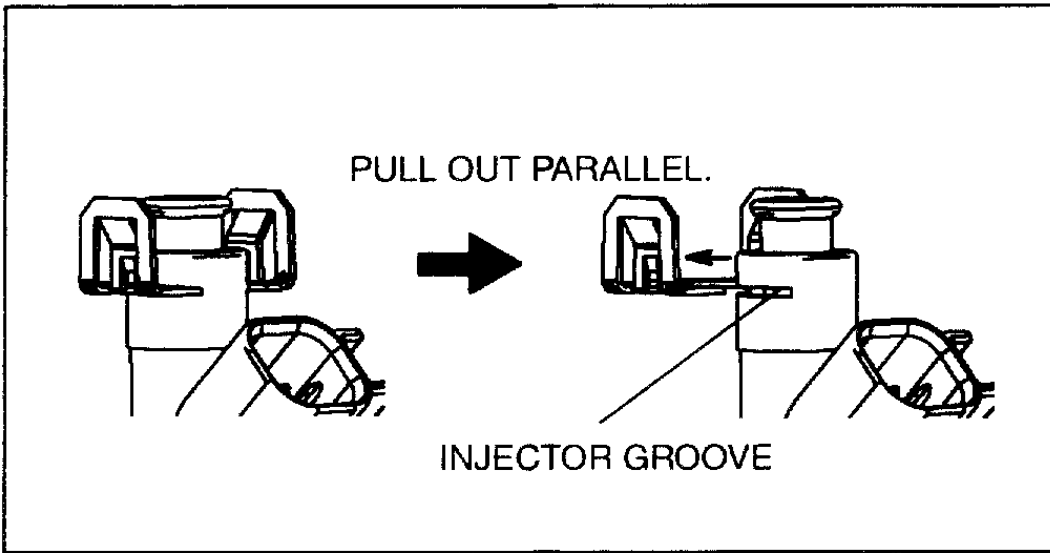

B3E0114W021

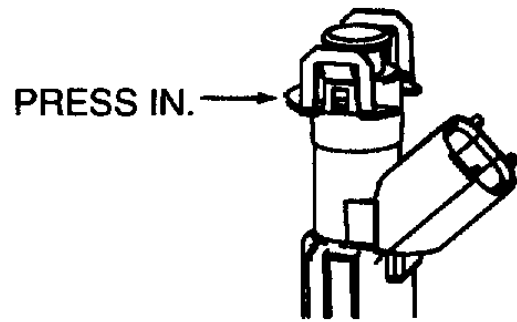

B3E0114W026