

Component Procedures: Seat Occupant Sensor


Table of Contents

1. Components (itype_32)
2. Seat Weight Sensor Inspection (Article 1358565)
3. Seat Weight Sensor Calibration (Article 1358564)

Component Procedures: Seat Occupant Sensor

Components (itype_32)

LOCATION INDEX

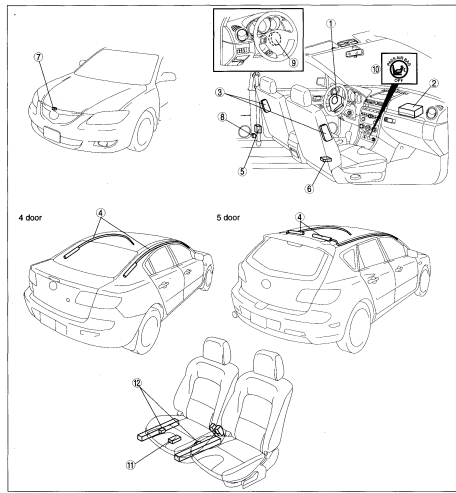


1	Driver-side air bag module	3	Side air bag module
2	Passenger-side air bag module	4	Curtain air bag module

5	Pre-tensioner seat belt
6	SAS control module
7	Crash zone sensor
8	Side air bag sensor


9	Clock spring
10	Passenger air bag deactivation (PAD) indicator
11	Seat weight sensor control module
12	Seat weight sensor

Seat Weight Sensor Inspection (Article 1358565)

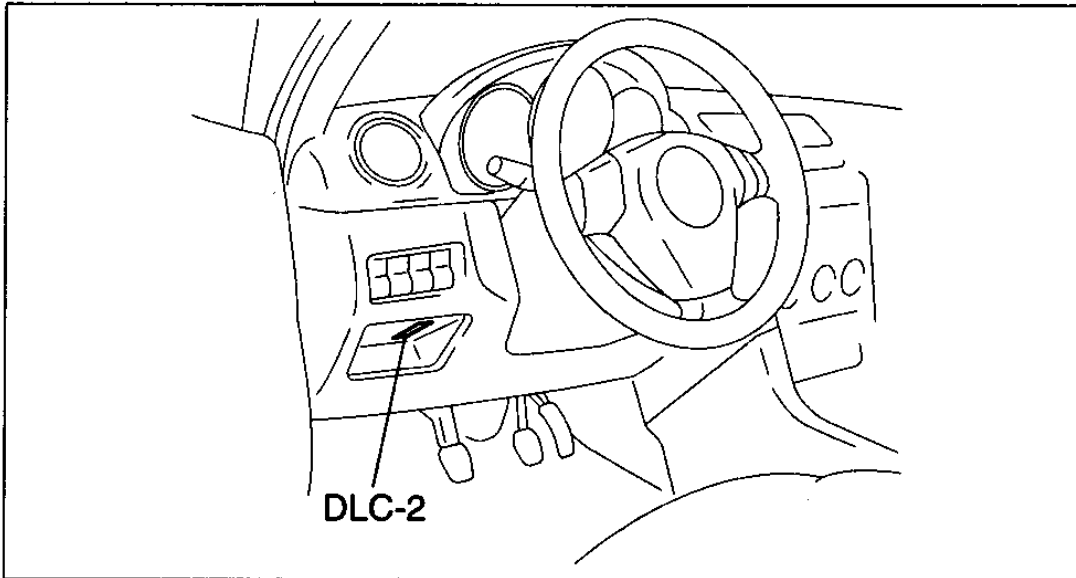

am3uuw000051

Seat Weight Sensor Calibration (Article 1358564)

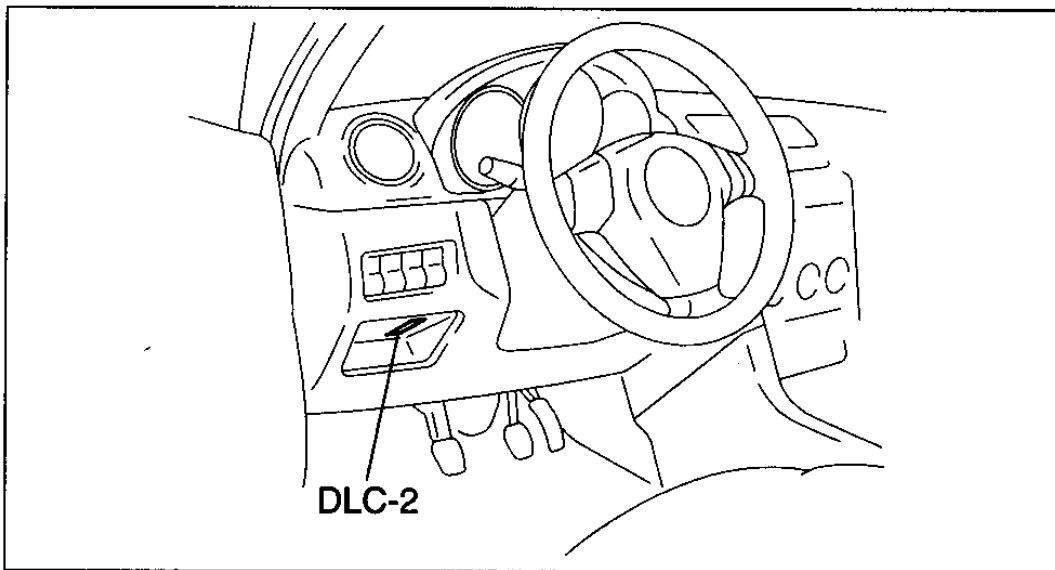

am3uuw000051