


Component Procedures: Passenger Assist Handle

Table of Contents


1. Removal and Replacement (itype_401)

Component Procedures: Passenger Assist Handle

Removal and Replacement (itype_401)

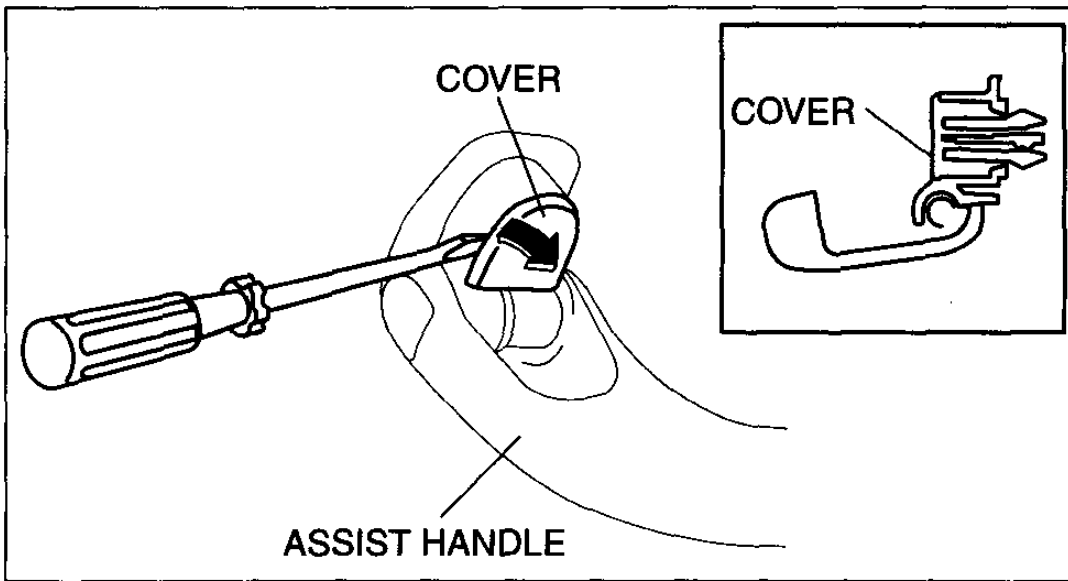

c3u0917w004

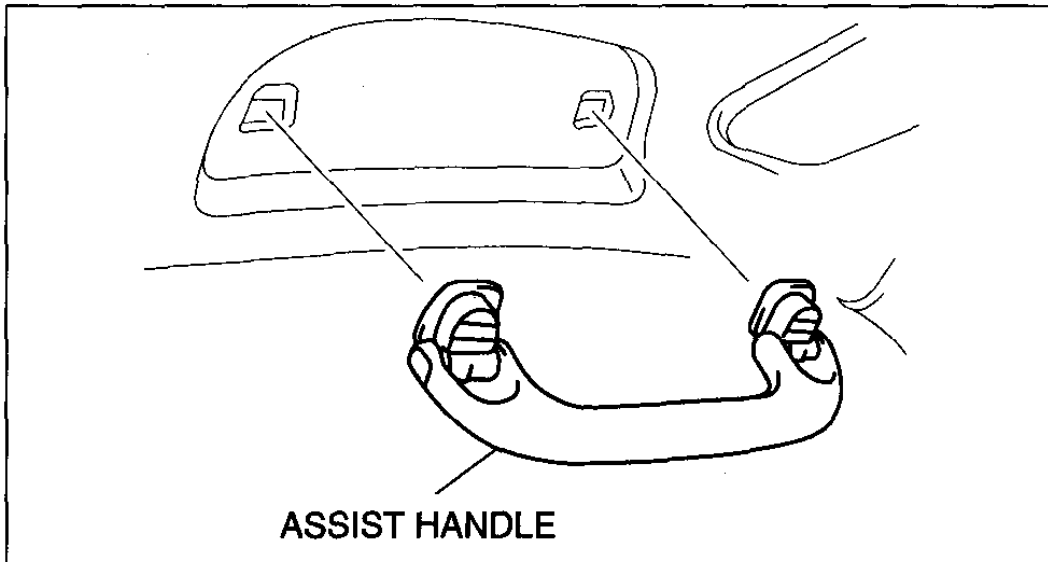

B3E0917W152