

# **Component Procedures: Rollover Valve**

## **Table of Contents**

1. Removal and Replacement (itype\_401)
2. Rollover Valve Inspection (Article 1366277)

## **Component Procedures: Rollover Valve**

### **Removal and Replacement (itype\_401)**

ROLLOVER VALVE

REMOVAL/INSTALLATION[LF, L3]

NOTE:

- Except for the California emission regulation applicable model, the rollover valve cannot be removed as it is welded on the upper surface of the fuel tank

.

- For the California emission regulation applicable model, the rollover valve cannot be removed as it is built into the fuel tank.

### **Rollover Valve Inspection (Article 1366277)**

ROLLOVER VALVE

INSPECTION[LF, L3]

NOTE:

- Except for the California emission regulation applicable model, the rollover valve cannot be removed and inspected as it is welded on the upper surface of the fuel tank

.

- For the California emission regulation applicable model, the rollover valve cannot be removed and inspected as it is built into the fuel tank.

1. Perform the fuel tank inspection. (See FUEL TANK INSPECTION[LF, L3].)

See: Rollover Valve, Fuel Tank > Component Tests and General Diagnostics