

Component Procedures: Transmission Speed Sensor

Table of Contents

1. [FN4A-EI] Automatic Transmission/Transaxle (Article 1444082)
2. [FS5A-EI] Automatic Transaxle/Transaxle (Article 1444084)
3. [FN4A-EI] Automatic Transmission/Transaxle (Article 1420427)
4. [FS5A-EI] Automatic Transmission/Transaxle (Article 1420429)
5. All Technical Service Bulletins (itype_100)
6. Repair Tips (itype_110)
7. [FN4A-EI] Automatic Transmission/Transaxle (Article 1420522)
8. [FS5A-EI] Automatic Transmission/Transaxle (Article 1420524)

Component Procedures: Transmission Speed Sensor

[FN4A-EI] Automatic Transmission/Transaxle (Article 1444082)

Non Standards

- Automatic Transaxle Location Index (1444083)

[FS5A-EI] Automatic Transaxle/Transaxle (Article 1444084)

Non Standards

- Automatic Transaxle Location Index (1444085)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1420427)

Non Standards

- Input/Turbine Speed Sensor Removal/Installation (1420428)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1420429)

Non Standards

- Input/Turbine Speed Sensor Removal/Installation (1420430)
- Intermediate Sensor Removal/Installation (1420431)

All Technical Service Bulletins (itype_100)

Tsbs

- A/T - Speed Sensor Replacement (MTIP-08-12-2, 2008/12/01)

Repair Tips (itype_110)

Tsbs

- A/T - Speed Sensor Replacement (MTIP-08-12-2, 2008/12/01)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1420522)

Non Standards

- Input/Turbine Speed Sensor Inspection (1420523)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1420524)

Non Standards

- Input/Turbine Speed Sensor Inspection (1420525)
- Intermediate Sensor Inspection (1378880)