

Component Procedures: Seals and Gaskets

Table of Contents

1. Parts and Labor (itype_189)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1421204)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1421206)

Component Procedures: Seals and Gaskets

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	5 Speed > Oil Pan Gasket	B	1.4	0.0
Replace	5 Speed > Pump Gasket	B	7.2	5.2

[FN4A-EI] Automatic Transmission/Transaxle (Article 1421204)

Non Standards

- Oil Seal Replacement (1421205)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1421206)

Non Standards

- Oil Seal Replacement (1421207)