

Component Procedures: Accelerator Pedal

Table of Contents


1. Components (itype_32)
2. Removal and Replacement (itype_401)

Component Procedures: Accelerator Pedal

Components (itype_32)

RELAY LOCATION

id092100800600

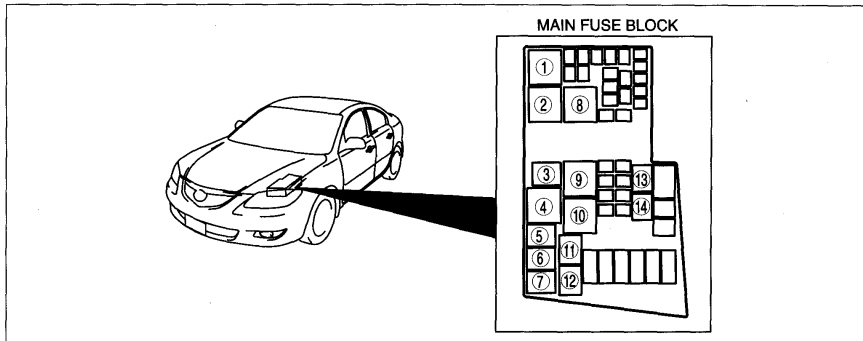


c3u0921w001

1	Main relay
2	Starter relay
3	A/C relay
4	Blower relay (L3 with TC)
5	Injector driver relay (L3 with TC) AT main relay (FS5A-EL)
6	Drive-by-wire relay
7	Horn relay
8	Rear washer relay (L3 with TC)

9	DRL relay (L3 with TC) Blower relay (except L3 with TC)
10	Headlight cleaner relay (L3 with TC) Rear washer relay (except L3 with TC)
11	Rear window defroster relay
12	Front fog light relay
13	Fuel pump relay No.2 (L3 with TC) DRL relay (except L3 with TC) Headlight cleaner relay (except L3 with TC)
14	Fuel pump relay

INTAKE AIR SYSTEM LOCATION INDEX(LF, L3)

id0113a580100

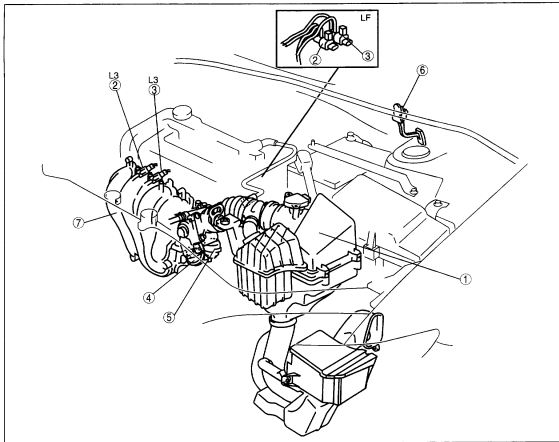


id0113a580100

1	Air cleaner
2	Variable intake air solenoid valve
3	Variable tumble solenoid valve
4	Variable intake air shutter valve actuator

5	Variable tumble shutter valve actuator
6	Accelerator pedal
7	intake air system

Removal and Replacement (itype_401)

1	Connector
2	Installation nut
3	Accelerator pedal

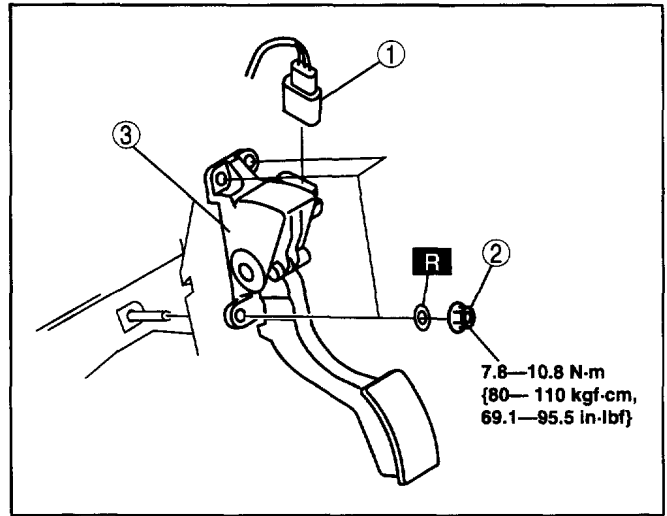

E3U113ZW6011