

Component Procedures: Control Module

Table of Contents

1. Parts and Labor (itype_189)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1386625)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1386627)
4. [FN4A-EI] Automatic Transmission/Transaxle (Article 1386461)
5. [FS5A-EI] Automatic Transmission/Transaxle (Article 1386463)

Component Procedures: Control Module

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Trans Controller	B	0.9	0.0

[FN4A-EI] Automatic Transmission/Transaxle (Article 1386625)

Non Standards

- PCM Removal/Installation (1386626)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1386627)

Non Standards

- TCM Removal/Installation (1386628)

[FN4A-EI] Automatic Transmission/Transaxle (Article 1386461)

Non Standards

- PCM Inspection (1386462)

[FS5A-EI] Automatic Transmission/Transaxle (Article 1386463)

Non Standards

- TCM Inspection (1386464)