

# Component Procedures: Expansion Valve

## Table of Contents

1. Parts and Labor (itype\_189)
2. Removal and Replacement (itype\_401)

# Component Procedures: Expansion Valve

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Expansion Valve	BP4K61J14A	Expansion Valve	125.27	
Valve Sensor	BP4K61J22	Valve Sensor	16.86	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Expansion Valve	B	3.2	0.0

## Removal and Replacement (itype\_401)

