

Component Procedures: Courtesy Lamp

Table of Contents


1. Electrical (OE) (itype_21)
2. Removal and Replacement (itype_401)
3. Component Tests and General Diagnostics (itype_383)

Component Procedures: Courtesy Lamp

Electrical (OE) (itype_21)


INTERIOR LIGHT/MAP LIGHT

0918-8

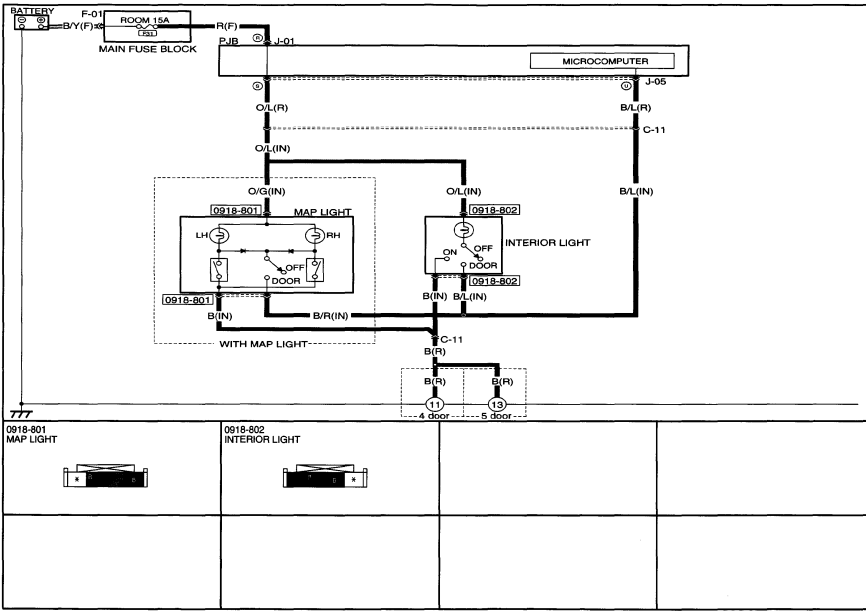


INTERIOR LIGHT/MAP LIGHT


0918-8

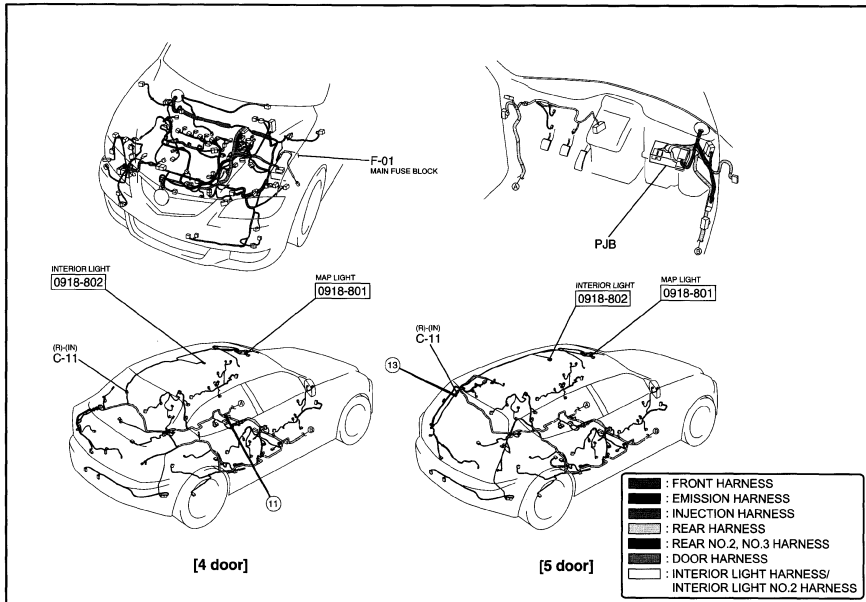


Removal and Replacement (itype_401)

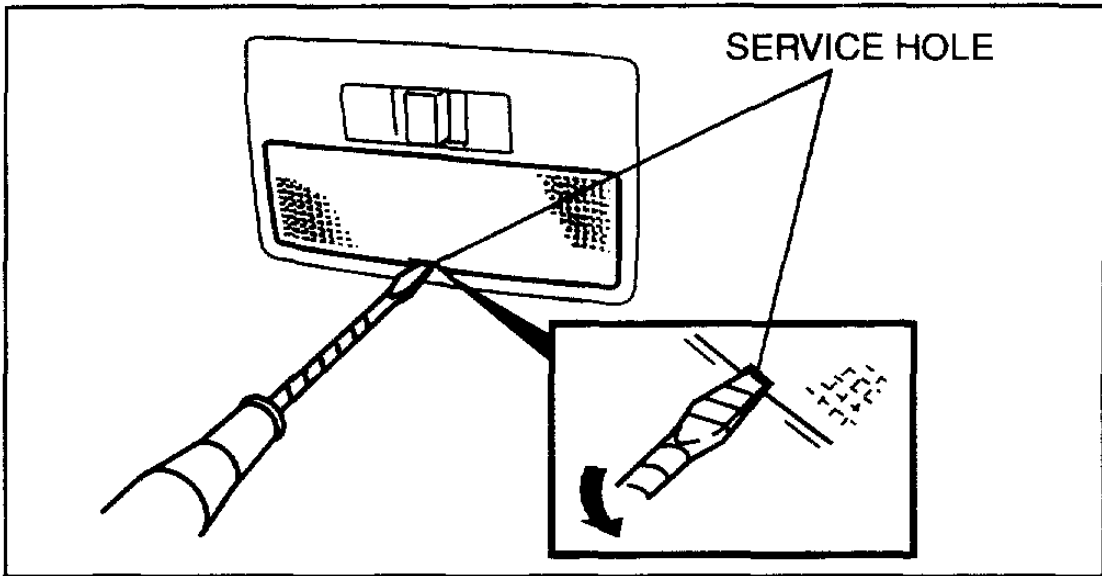

B3E0918W152

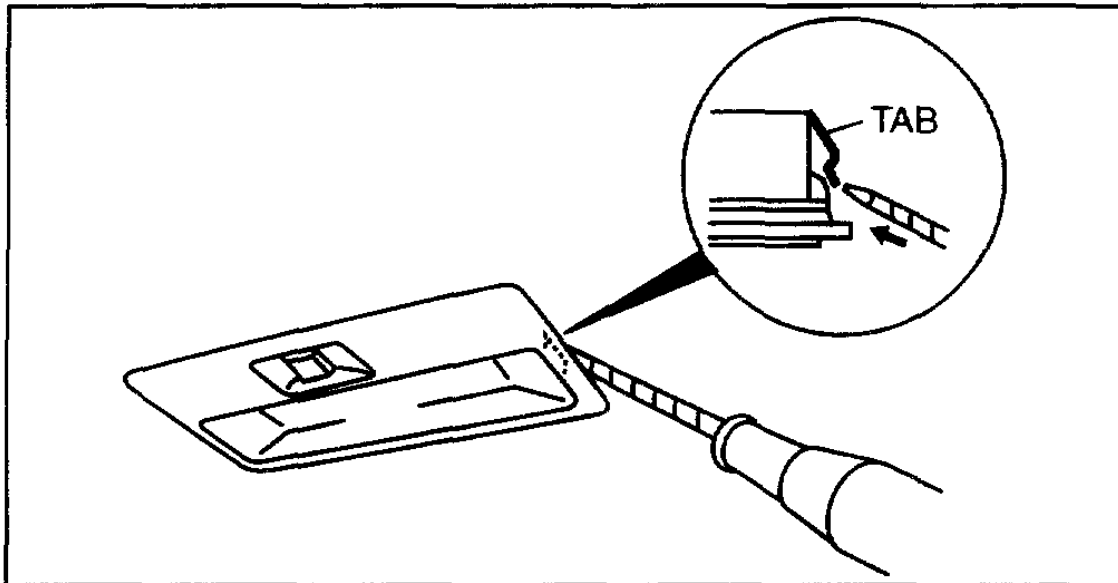


b3e0918w151

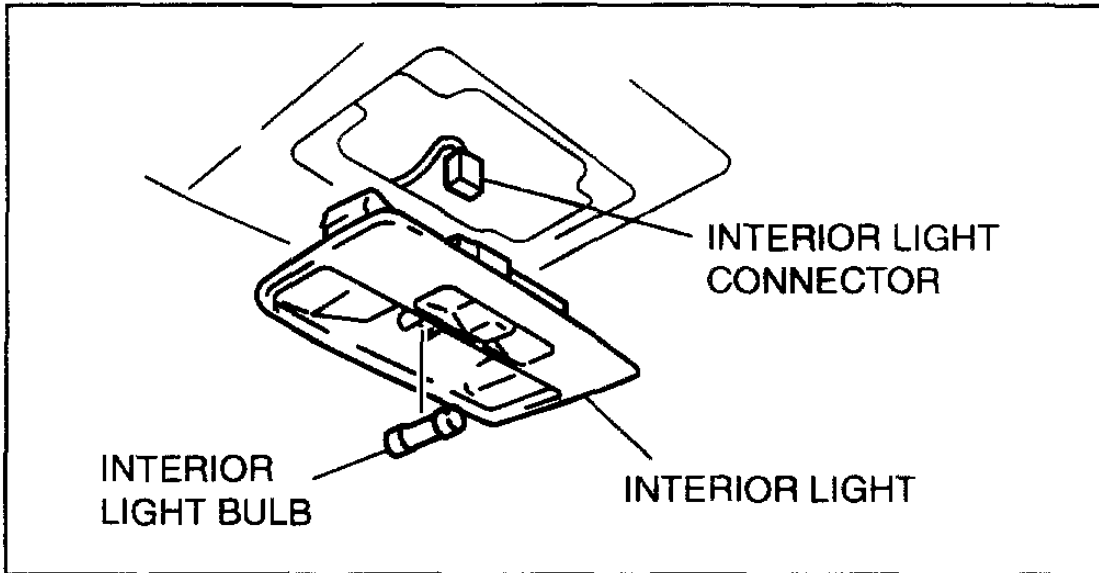


b3e0918w150

 Component Tests and General Diagnostics (itype_383)



Switch position	Terminal		
	B	C	D
ON	○ —	⊗ —	○ —
DOOR		○ — ⊗ —	○
OFF			

B3E0918W154

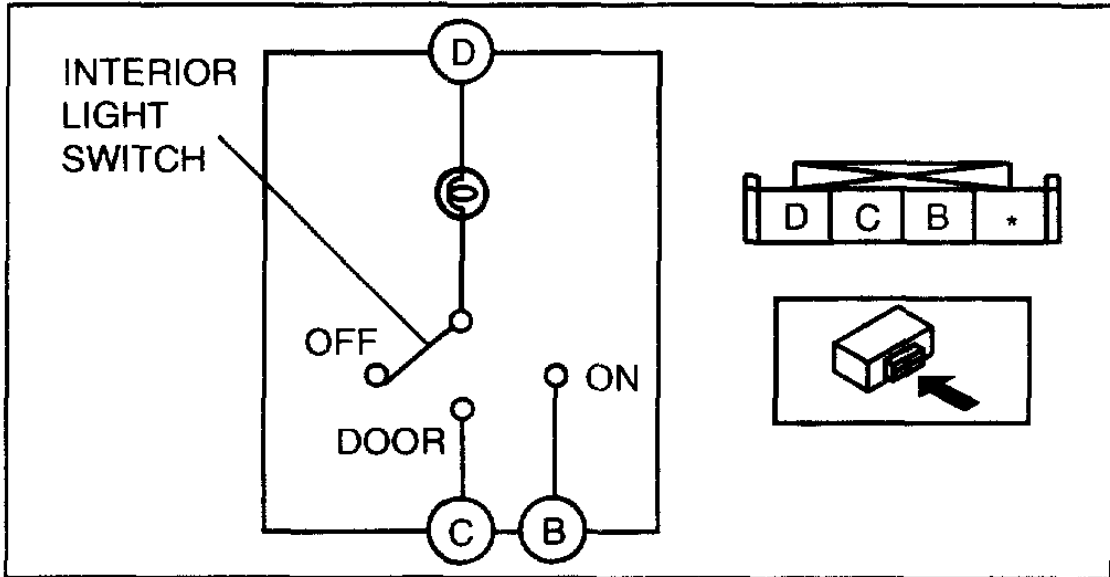

b3e0918w153