

Component Procedures: Oil Pressure Sender

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_32)
3. Component Tests and General Diagnostics (itype_383)

Component Procedures: Oil Pressure Sender

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Oil Pressure Sending Unit	LF0118501	Oil Pressure Sending U?	21.85	


Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Oil Pressure Sending Unit, R&R	B	0.6	0.4

Components (itype_32)

INSTRUMENTATION/DRIVER INFO. LOCATION INDEX

id092200801000

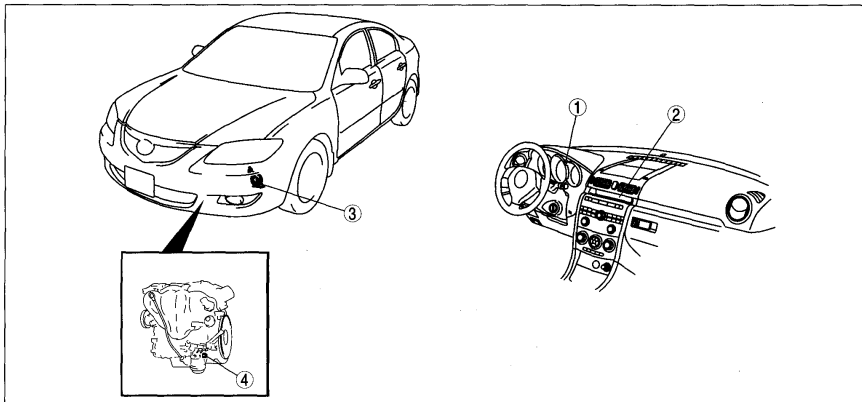

c3u0922w101

1	Instrument cluster
---	--------------------

2	Information display
3	Horn
4	Oil pressure switch

Component Tests and General Diagnostics (itype_383)

OIL PRESSURE SWITCH

INSPECTION

1. Verify that the oil pressure warning light illuminates when the ignition switch is at the ON position.
2. Verify that the oil pressure warning light goes out when the engine is started.
 - If the oil pressure warning light does not illuminate or remains illuminated, inspect the related wiring harness.
 - If the related wiring harness is normal, inspect the oil pressure. (See OIL PRESSURE INSPECTION [LF, L3].)
 - If the oil pressure is normal, replace the oil pressure switch.