

Component Procedures: Brake Light Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Component Tests and General Diagnostics (itype_383)

Component Procedures: Brake Light Switch

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
Stoplamp Switch > Without Cr?	BP4K66490A	Stoplamp Switch	18.56	
Stoplamp Switch > With Cruis?	BN7N66490	Stoplamp Switch	19.97	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Stoplamp Switch, R&R	B	0.3	0.2

Component Tests and General Diagnostics (itype_383)

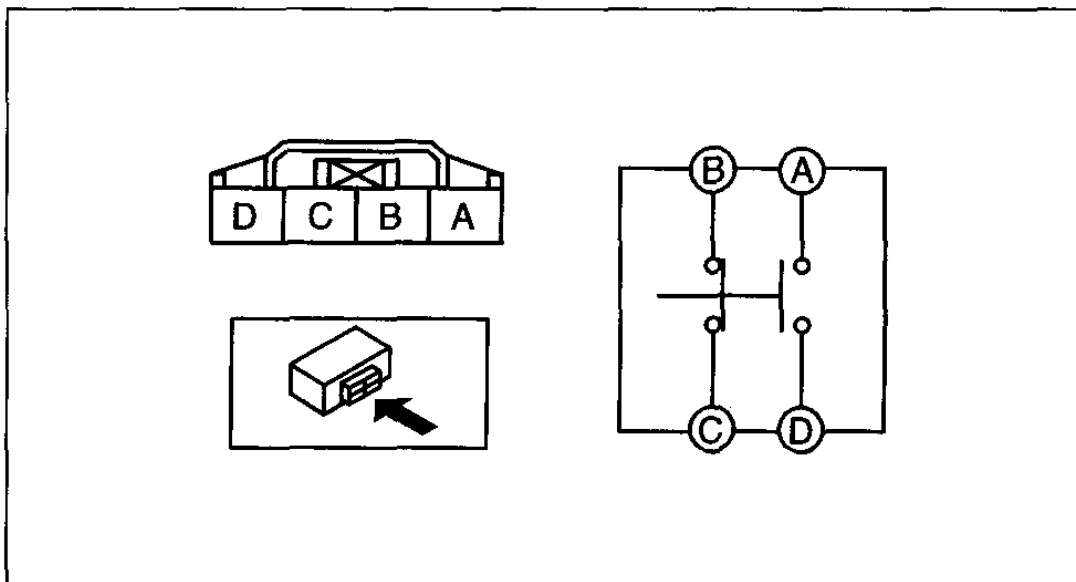

c3u0411w005

○—○ : Continuity

Condition	Terminal			
	A	B	C	D
When the brake pedal is depressed	○	—	—	○
When the brake pedal is not depressed		○	—	○

c3u0411w006