

Component Procedures: Hazard Warning Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Components (itype_32)
3. Removal and Replacement (itype_401)
4. Component Tests and General Diagnostics (itype_383)

Component Procedures: Hazard Warning Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Hazard Switch	BP4K664H0	Hazard Switch	36.31	


Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Hazard Switch, R&R	B	0.4	0.3

Components (itype_32)

LIGHTING SYSTEMS LOCATION INDEX


40918000100

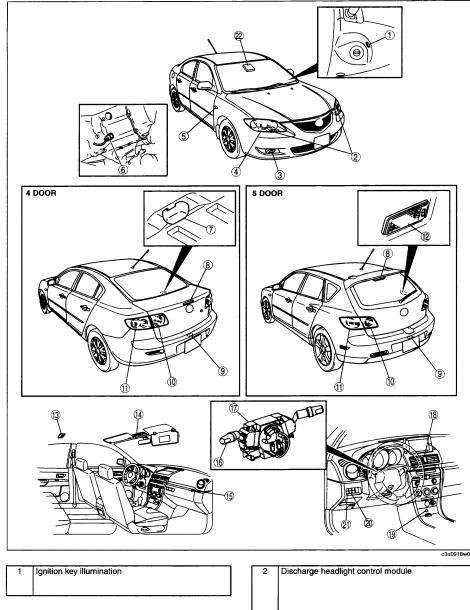

3	Front fog light
4	Front combination light
5	Front side turn light
6	Back-up light switch (MTX)
7	Trunk compartment light
8	High-mount brake light
9	License plate light
10	Inboard light
11	Rear combination light

12	Cargo compartment light
13	Interior light
14	Map light
15	Glove compartment light
16	Light switch
17	Combination switch
18	Hazard warning switch
19	Ashtray illumination
20	Panel light control switch
21	Headlight leveling switch
22	Light sensor

Removal and Replacement (itype_401)

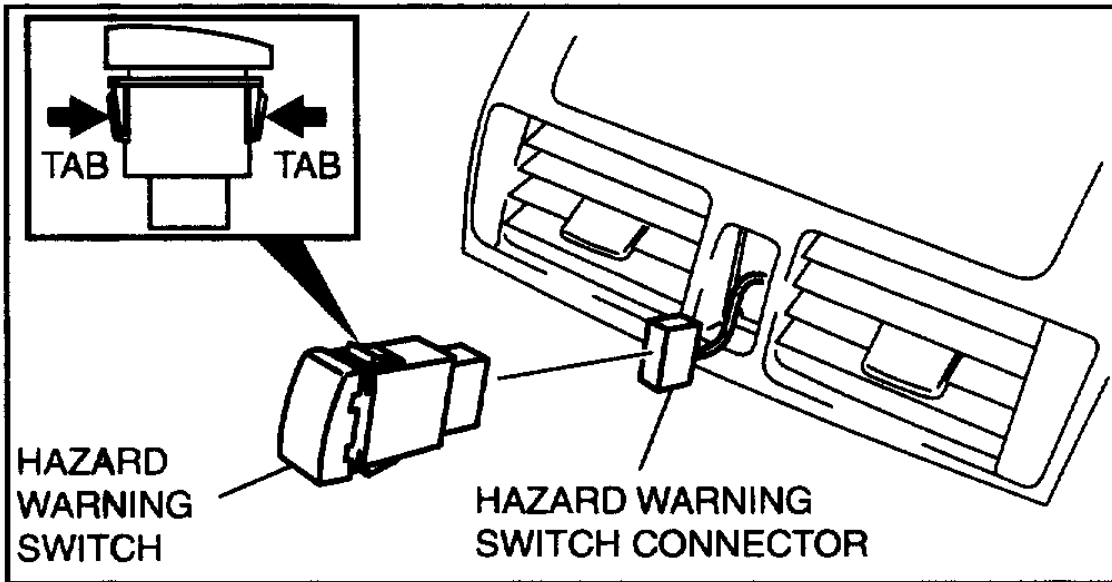


b3e0918w168

Component Tests and General Diagnostics (itype_383)

○ — ○ : Continuity ○ — ⊕ — ○ : Bulb

Switch position	Terminal			
	A	C	E	F
Off			○ — ⊕ — ○	
On	○ — ○		○ — ⊕ — ○	

B3E0918W133

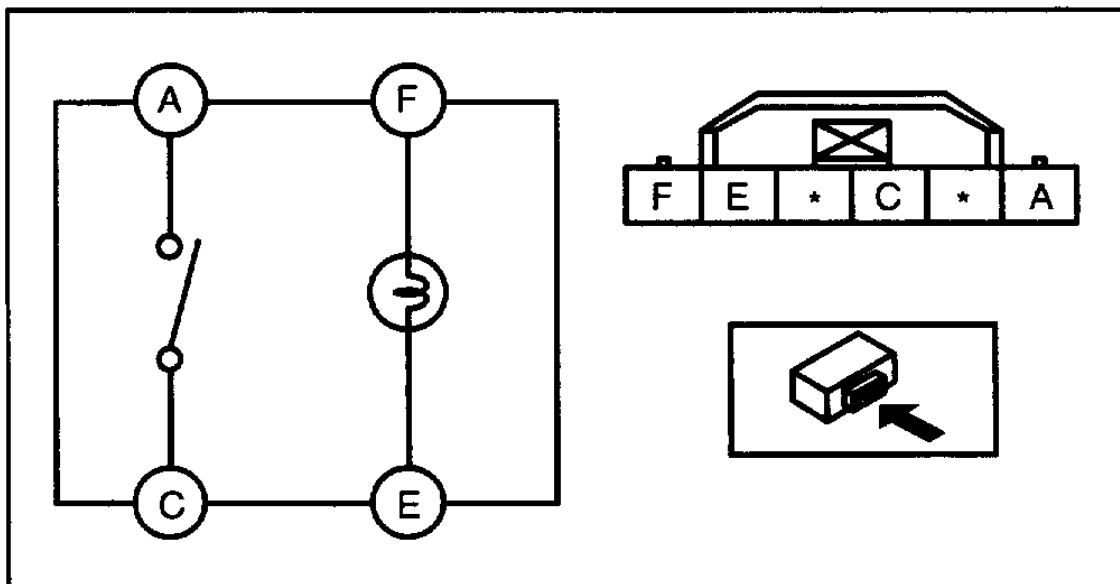

b3e0918w132